



H4113F3RU

Column Well



STAGE 1

Ensure you have all the correct items for your new water feature.



STAGE 2

Lay down some protective material before working on the feature. Stand the large 'well' on top of the pedestal ensuring it is central and flush at the back.



STAGE 3

Locate the black plastic tubing and attach one end over the adaptor on the pump, make sure that the pump's water flow regulator is set to fully open. Feed the power cable through the notch in the back.



STAGE 4

Attach the other end of the tubing to the fixed pipe found underneath the bottom of the 'column' section.



STAGE 5

Stand the column section on top of the well ensuring it is square and central to the rest of the feature, the tap is functional and can be used to control the water flow. Do not turn the tap to the fully off position whilst the feature is running as this will cause damage to the pump.

IMPORTANT - WINTER CARE

Winter Ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- Disconnect power to pumps.
- Remove adapter from bottom bowl to open drains and let all moisture out. Keep drains open throughout winter.
- Place an absorbant material like burlap, blankets etc inside vases/bowls and cover all with a fountain cover.
- Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.