



# H4472F2RN

## Falling Water Fountain

### STAGE 1

Prepare a suitable location for your new fountain. The fountain should sit on a firm and level pad. Set the Pedestal and Basin in place.

### STAGE 2

Set the Top Piece on its side. Slip the AB870 Light, cord first, into the Tube Flow Adjuster. Pull the cord all the way through and allow the light to nest into the top of the Tube Flow Adjuster. Ste the Tube Flow Adjuster down into the top opening of the fountain.

### STAGE 3

The Barb Adapter has a slot in the threaded portion which fits the light cord. With the Barb Adapter held below the top piece, place the light cord into the slot and thread the Barb Adapter into the threaded coupling on the underside of the top piece.

### STAGE 4

Push one end of the 3/4" water tube over the barb of the 15-157 Barb Adapter.

### STAGE 5

With the help of a second person, hold the fountain top close to the basin (or carefully rest it on the basin). Drop the light power cord down through the basin hole and pull out from under the pedestal. The second person may need to carefully lean the basin and pedestal over while you reach underneath to pull out the cord.

### STAGE 6

Place the pump in the centre of the basin. Push its cord down through the basin hole, also pulling it out from under the pedestal.

### STAGE 7

Place the two-holed rubber stopper on the pump cord about 10" from the pump body. The larger end of the stopper should be closest to the pump. Then, insert the power cord from the light into the stopper's other hole. Press the stopper down into the hole to make a water tight seal.

### STAGE 8

Thread the 15-24H adapter into the top of the pump. Push the open end of the Water Tube over the pump adapter.


### STAGE 9

Gently place the top in the basin. Fill the basin with water to about 1" from the top.

### STAGE 10

Connect the light power cord to the transformer provided and plug in the transformer and pump to enjoy your fountain.

Fountain Shape may differ from drawing depending on whether you have the 4359F2, 4471F2, 4472F3, or 4473F2, but all of these set up in the same way.

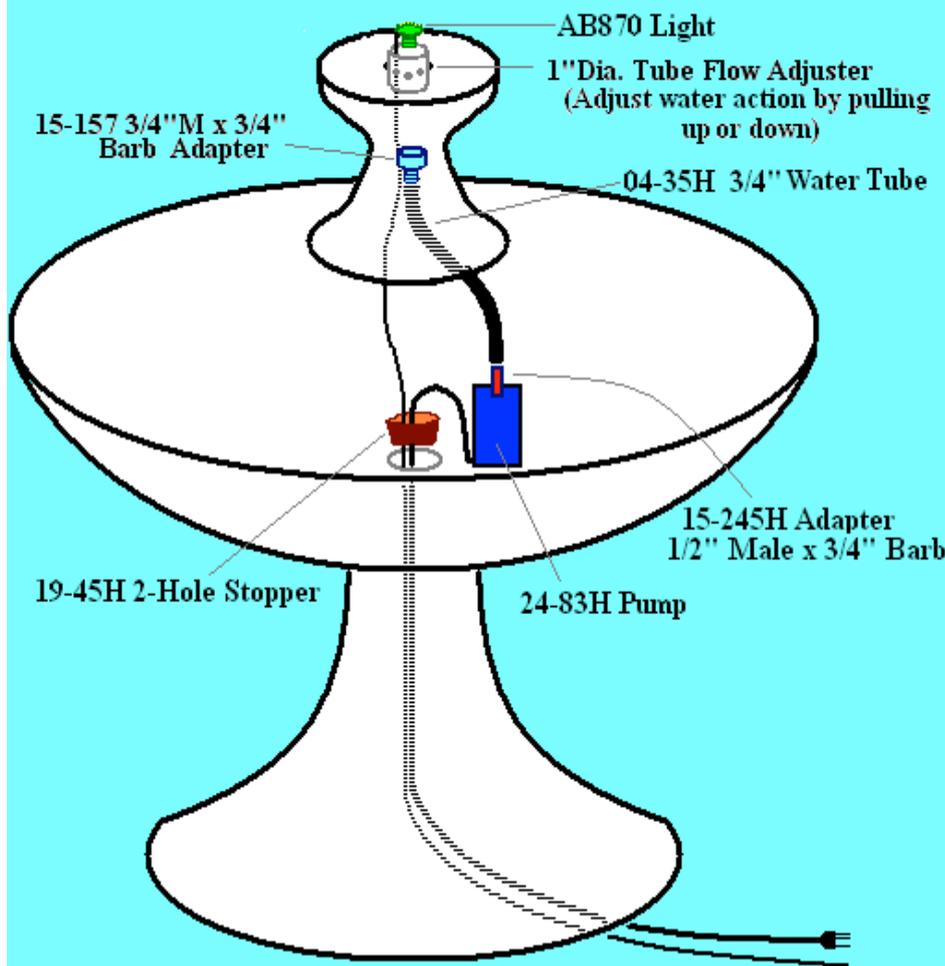

### IMPORTANT - WINTER CARE

Winter Ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- Disconnect power to pumps.
- Remove adapter from bottom bowl to open drains and let all moisture out. Keep drains open throughout winter.
- Place an absorbant material like burlap, blankets etc inside vases/bowls and cover all with a fountain cover.
- Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.

**ADVISORY  
NOTICE  
HEAVY ITEMS!**

Please take care when  
handling these items