

3 Tier Barrel Water Feature Instructions

PREPARATION

Before beginning assembly, please read all warnings and safety precautions.

WARNING

- To reduce the risk of electric shock, plug-in the pump to a residual current device (RCD) (not supplied).
- Do not exceed the voltage shown on the pump.
- Always disconnect the pump from the power source before performing any maintenance or work on the pump, light(s) or any fountain fittings.
- Inspect the power cord for damage before installation and/or maintenance. Replace the entire pump if damage is found.
- Use a proper power source as indicated on the pump label. Keep the cord away from high temperatures and/or heat sources.
- Do not lift the pump by its power cord.
- Keep the water feature out of reach of children.
- Do not let the pump run dry. Pump must be completely submerged for proper operation and cooling.
- Do not pump hot liquids.
- Operate with freshwater only. Avoid heavily chlorinated water and water with high PH levels.
- Place water feature outdoors on a clean, level surface.
- Store indoors during cold weather periods. Do not operate in freezing weather conditions.
- Only use with the pump / transformer / adapter provided.



ASSEMBLY INSTRUCTIONS

1. Turn the Small Barrel (5) upside down and screw the Medium Panel (4) to it using the screws provided (9).
 2. Turn the Medium Barrel (6) upside down and screw the Large Panel (11) to it using the screws provided (9).
 3. Connect the black side of the Pipe (7) into the Water Pump (8) and place the Water Pump (8) in to the Large Barrel (10). Connect the other side to the bottom of the Medium Barrel (6). Do not plug into power supply until the fountain is fully assembled and has been filled with water.
 4. Place the Medium Barrel (6) on top of the Large Barrel (10) and screw the Large Panel (11) to the top of the Large Barrel using the screws provided (9).
 5. Insert a Pipe (7) into the bottom of the Small Barrel (5) and connect the other side of the Pipe (7) to the inside of the Medium Barrel (6). Screw the Medium Panel (4) to the top of the Medium Barrel (6) using the screws provided (9).
 6. Screw the Decorative Pump Handle (1) on to the Spout (2) through the pre-drilled holes using the screws provided(9). Attach the Pipe (7) to the bottom of the Spout (2). Then screw the Spout (2) to the Small Panel (3) using the screws provided (9).
 7. Connect the Pipe (7) to the bottom of the Small Barrel (5) and screw the Small Panel (3) to the top of the Small Barrel (5).
 8. Gently pour water into the fountain, being careful not to overflow which will cause splashing. Make sure the water completely submerges the pump and the water runs clear during operation. Plug the pump cord into your power supply. Make sure that there is no water around the plug & always keep the power source in a dry place.
- NOTE: We recommend that you use distilled water to prevent scale build-up. The first time you operate the pump it can take up to 5 minutes for the air to be completely expelled and water to flow properly.

COMPONENTS

1.	2.	3.	4.
1 PC	1 PC	1 PC	1 PC
5.	6.	7.	8.
1 PC	1 PC	3PCS	1 PC
9.	10.	11.	12.
19PCS	1 PC	1 PC	1 PC

1. Decorative Pump Handle (qty x 1)
2. Spout Connector (qty x 1)
3. Small Panel (qty x 1)
4. Medium Panel (qty x 1)
5. Small Barrel (qty x 1)
6. Medium Barrel (qty x 1)
7. Tubing (qty x 3)
8. Fountain Pump (qty x 1)
9. Connector Screws (qty x 19)
10. Large Barrel (qty x 1)
11. Large Panel (qty x 1)



3 Tier Barrel Water Feature Instructions

The logo for BERMUDA, featuring the word "BERMUDA" in a bold, white, sans-serif font. The letter "M" is stylized with a white triangle pointing downwards through its center. The logo is set against a black background that has a wavy, banner-like shape at the bottom.

CLEANING AND MAINTENANCE

Before beginning assembly, please read all warnings and safety precautions.

- Make sure all connectors are tight and no water is getting in.
- Keep the water clean during the summer. Keep topping with water every 3 or 4 days with clean water.
- Clean any pipes every month to prevent any build-up of algae which could put extra pressure on your pump.
- Ensure any soil / dirt around the pump is contained and doesn't block the pump.
- Always make sure there is enough water for the pump to work otherwise you could damage the pump. NEVER RUN DRY.
- Make sure you clean the pump on a regularly basis. When you are cleaning, make sure the power is off.
- During the winter, bring the feature inside, give it a good clean and store it safely for next year.

GUARANTEE

This product is guaranteed against defects in material and workmanship for 12 months from the date of purchase, under normal usage.

The guarantee DOES NOT APPLY in case of improper use, negligence, lack of maintenance or accidental damage to the pump. If the pump fails due to a manufacturing fault within this period it will be either repaired or replaced free of charge. Moving parts or wearable parts including the impeller and any washers or O rings are not covered by the guarantee.

Should your Bermuda product stop working refer first to trouble shooting and if this does not help, return the product to the place of purchase.

Liability is limited to replacement of the faulty product only. No other costs will be reimbursed. This guarantee is not transferable and does not affect your statutory rights.

Do not attempt to tamper with the pump or solar panel. Do not access components inside the pump body, unless otherwise instructed in the instruction manual. Any damage occurred by doing so may invalidate the warranty.

The manufacturer or supplier shall not be responsible, or held liable for any damages caused by defective components or materials of this product, or for loss incurred by interruption of service, or any consequential/incidental damages and expenses arising from the production, sale use or misuse of this product or any other consequential loss.

Any warranty claim must be accompanied by a valid, dated proof of purchase. Evolution Aqua, Bermuda, its distributors and dealers shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this product.

The installation and use of your product outside of our recommendations as printed in this manual may also void the warranty.