 


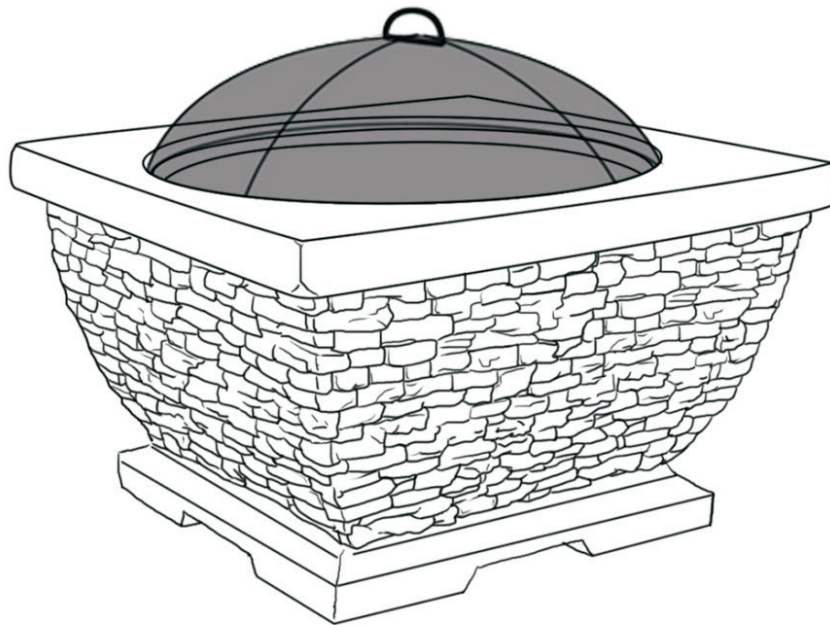


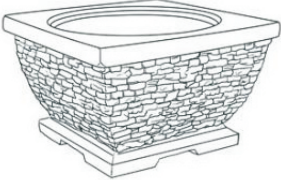 

Assembly Instructions

Warnings: You must read this before you proceed.

FIREPIT -HR18303AA




Parts List

Part NO.	Picture	Description	QTY
A	 A dome-shaped metal screen with a small ring at the top center, used for spark protection.	Spark Safeguard Screen	1 PC
B	 An oval-shaped grill with horizontal slats, used for burning logs.	Log Grill	1 PC
C	 A shallow, wide, bowl-shaped container, used for holding fire.	Fire Bowl	1PC
D	 A square-shaped frame with a textured, stone-like appearance, used as the main structure for a fire pit.	Fire Pit Main Frame	1PC
E	 A long, thin metal tool with a hook-shaped end and a handle, used for handling logs or fire.	Hook Tool	1PC

Assembly Preparation

Before Beginning Assembly:

 Unpack all the parts for a clear overview.

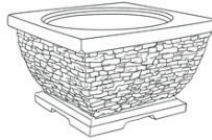

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Step 1

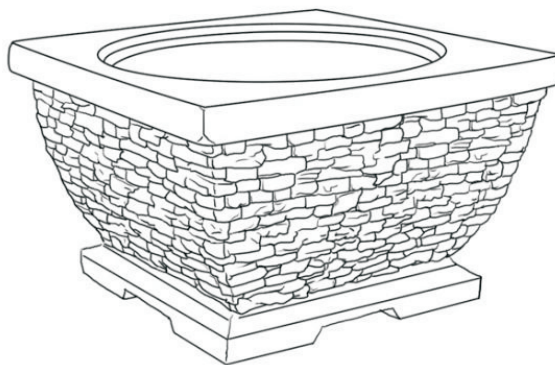


Unpack all components carefully from the package. Put the Fire Pit Body on a hard, level and non-combustible surface.

Step 2

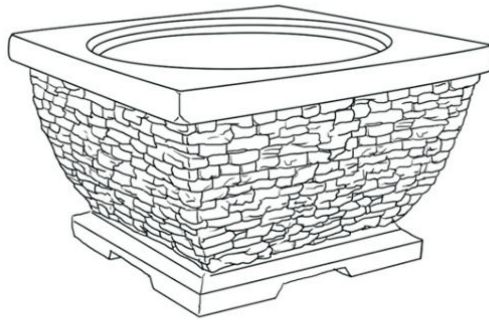


Put the Fire Bowl into the Fire Pit opening as shown in Step 2 above. Make sure it sits evenly in the frame housing.

 Step 3

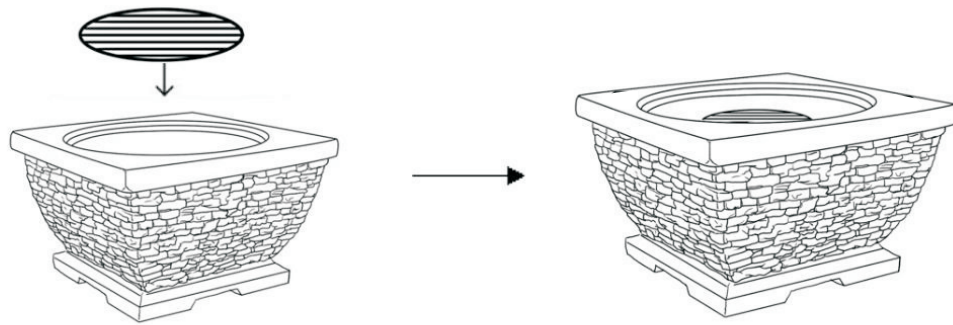

Take out the Handles after the Fire Bowl is placed inside the Fire Pit Main Housing. Place the Log Grill into the Fire Bowl.

Step 4

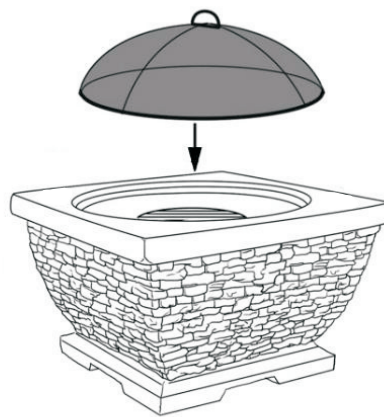


Put the Spark Safeguard Screen onto the top opening of the Fire Pit Body and make sure it sits into it evenly. The Firepit is ready for use.

CAUTION: Firepit will become hot during use and remain hot after use.

**As the firepit is hot during or after using, Please do not touch it!
KEEP CHILDREN AT BAY DURING USE !!!**

Keep away from combustible material and wooden & PE Rattan furniture during use !

Operating Instructions:



WARNING
FOR YOUR SAFETY

Before using this outdoor fire pit, make sure you have read, understood and are following all information provided on page 1 of this manual. Failure to follow those instructions can cause death, serious injury or property damage.

Lighting:

1. Make sure there is only a small amount of ash (1/2" thick) at the bottom of the metal bowl.
2. Place a layer of dry kindling or a natural fire starter onto the center of the log rack.
3. Place above that layer the dry seasoned hardwood that is cut to lengths no more than 12"
4. Use a match to light kindling or fire starter.
5. Replace the safeguard spark screen when the kindling or fire starter is lit.

Tending the Fire

You may need to shift and/or add logs for an ideal experience.

Reminders:

- Always wear protective gloves or a pot holder when tending a fire.
 - Wait until glowing wood have developed before adding any additional wood.
 - Do NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
1. Use a long handled fire pit tool to carefully take away the spark screen.
 2. Use the long handled fire pit tool to shift the logs to allow additional airflow.
 3. If additional wood is required, place wood on top of the burning log. Be careful not to shift ashes.
 4. Replace the safeguard spark screen.

Extinguishing

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

Maintenance Instructions:

Inspecting

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

Check all parts to make sure they are secure.

Cleaning

This outdoor fire pit should be cleaned on a regular basis to promote safer experiences and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

Reminders:

- ⌘ Do NOT attempt to clean this outdoor fire pit until the fire is COMPLETELY out.
 - ⌘ Do NOT use oven cleaner or abrasive cleaners as they will damage this product.
 - ⌘ Do NOT clean any part of this outdoor fire pit in a self-cleaning oven as it may damage the finish.
1. Wipe exterior surfaces of the metal parts with a mild dishwashing detergent or baking soda.
 2. For stubborn surfaces on the metal parts, use a citrus based degreaser and a nylon scrubbing brush.
 3. Rinse clean on the metal with water.
 4. Use a soft dry brush to wipe away the dust on the faux stone fire pit body. Never use water or other liquids to clean the faux stone top.

Storage

Do NOT move or store this outdoor fire pit until the fire is COMPLETELY out.

1. Once the fire is out, logs are cold and outdoor fire pit is cool to the touch, remove ashes and properly dispose.
2. Store assembled in a location away from children and pets.

Note: If you do not use a cover, store this outdoor fire pit in a dry location free from rain.