


# Easy Fountain Instructions 45054L Brick and Bowl Spills

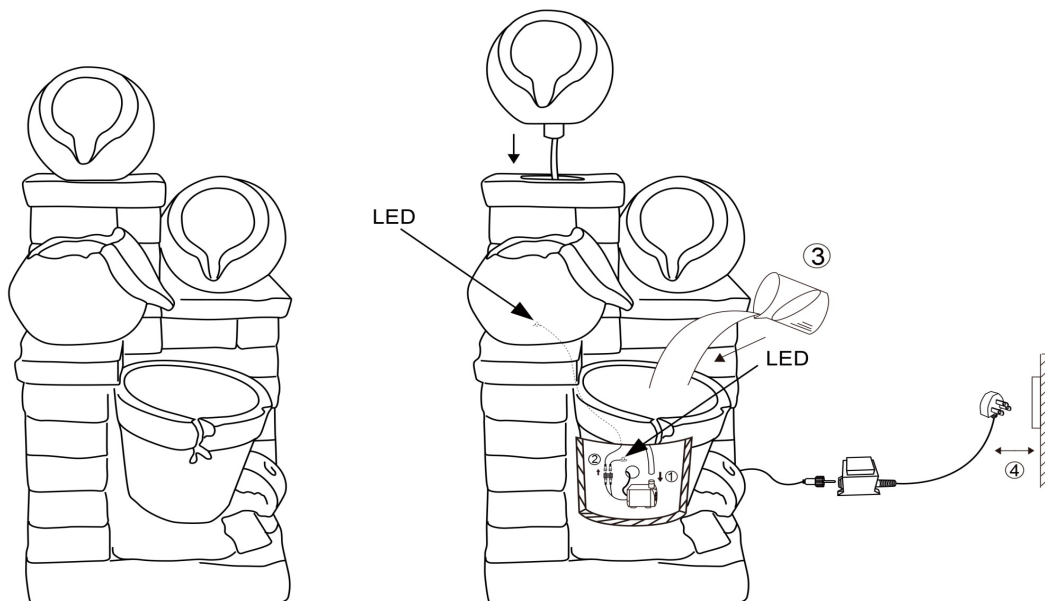

Please read the assembly and pump operating instructions carefully and observe the safety instructions.



## STAGE 1

Position the water feature onto a secure and level surface.

## STAGE 2

As shown in the diagram above locate the access cavity / water reservoir at the back of the water feature. Reach inside the feature and carefully bring out the internal water pipe and the LED cables.

## STAGE 3

Attach the internal water pipe to the pump outlet and connect the internal LED wires to the adaptor plug provided.

## STAGE 4

Position the pump and excess wires inside the access cavity / water reservoir ensuring that the long pump and LED wire extend out through the opening. Replace the back trapdoor to cover the opening.

## STAGE 5

Carefully fill the feature with sufficient water taking care to ensure the pump is fully submerged.

## STAGE 6

Connect the pump and LED adaptor to a mains power outlet.

**The transformer should never be submerged or stood in water.**  
**Please note the transformer will get hot while in use, this is normal.**



- ⌚ Clock wise Full Flow
- ⌚ Anti-clock wise reduced Flow

**PUMP FLOW:** The pump flow can be adjusted with the regulator, this is found on the inlet of the pump. We recommend starting with the flow regulator fully open and then adjusting down if required.

**ELECTRICAL SAFETY:** If outdoors the outlet must be waterproof. We recommend the use of a residual current device (GFI) Ground Fault Interrupter (available from all good D.I.Y. stores) when connecting the fountain to the electric supply.



### Cleaning your fountain

- Clean and top-up the water on a regular basis.
- To empty the fountain of water for cleaning or for winter care:

#### Smaller fountains (that are light enough to be lifted)

the water can be emptied by simply inverting the fountain and letting the water pour away through a suitable drain or sink.

**Larger (heavier) fountains** - water can be removed by using a large sponge or by purchasing a simple syphon pipe available from aquatic supply stores.

- Always shut off the power before cleaning and maintaining the fountain or pump.

### Winter care

Guidelines to help protect your **easyfountain®**:

- If possible, bring your water feature indoors eg. garage or shed.
- Drain the fountain of all water. If water freezes within the fountain, this can cause damage.
- If your fountain is left outside and drained of all water, a Kelkay **easyfountain®** cover can be purchased to cover the entire fountain however we cannot guarantee that it will protect your fountain from winter damage.

### Troubleshooting

#### Pumps

- Check the water is covering the pump by at least 5cm.
- Check the flow dial on the pump to ensure the correct "flow" for the fountain is set.
- Check to see if it is running if it is then it is probably blocked.
- Clear the pipe and impeller from blockages.
- Check the fuse in the plug.

#### Lights/Transformers

- If the lights and the pump are not working it is likely the transformer has failed. If the product is within the warranty period and misuse has not occurred a replacement part can be issued providing a proof of purchase is supplied.
- Flickering lights are caused by a build-up of algae and lime scale on the connectors between the transformer and the lights. This is not covered by the warranty. Replacement parts can be purchased from Kelkay LTD.
- If the lights stop working they are available to purchase from Kelkay LTD. Light bulbs are not covered under the warranty.
- Individual L.E.D lights are not replaceable but can be replaced as a set.

### Caring for your fountain

The **easyfountain®** aftercare range includes products to help care for your fountain. Please see the table below for more information.

	<b>Fountain Algae Stopper 385g</b> <ul style="list-style-type: none"> <li>• Easy to use</li> <li>• Removes and prevents algae and bacteria</li> <li>• Will not harm animals and birds</li> </ul>
	<b>Fountain Grime and Lime Cleaner 500ml</b> <ul style="list-style-type: none"> <li>• Easy to use</li> <li>• Removes dirt from your water feature</li> <li>• Limescale buster</li> </ul>
	<b>Fountain One Shot Algae Remover 100g</b> <ul style="list-style-type: none"> <li>• Easy to use</li> <li>• Removes algae and bacteria</li> <li>• Stops slime build up</li> </ul>
	<b>Fountain Citronella Water Scent 125ml</b> <ul style="list-style-type: none"> <li>• Easy to use</li> <li>• Clean and fresh scent</li> <li>• Helps to repel insects</li> </ul>
	<b>Fountain Shine Spray 500ml</b> <ul style="list-style-type: none"> <li>• Easy to use</li> <li>• Helps preserve radiance</li> <li>• Leaves a smear free shine</li> </ul>

**Please note:** The **easyfountain®** aftercare range is only available in the UK and Republic of Ireland. Please check with your nearest stockist for availability.

#### Leaks/Loss of Water

- Overfilled - make sure the water reservoir is not overfilled. Remove water if necessary.
- Pump Flow Rate - check the pump and reduce the flow rate if required.
- Level - ensure the fountain is completely level.
- Natural evaporation, weather elements and wildlife will also affect the fountain water level on a daily basis. Top up your fountain as required.

#### Main Body & Paintwork

- Do not confuse limescale residue with fading paint - this is not a fault and in most cases the fountain needs cleaning.
- Paint peeling will occur if the fountain has been left outside in the frost and will not be covered by the warranty.
- Parts broken off the main body while in use are usually caused by bad weather conditions and not covered by the warranty.