

# SETTING UP THE 5623F2

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) At least three strong people are needed to set up this fountain. Place the 6623 Bowl on your prepared site with the notch on the bottom edge for the power cord exit facing toward your power supply. Set the 5623 Millstone next to the bowl – or if you place a cushioning material in between, you can temporarily lean it against the bowl.


2) Slip the Ring Light into the top center of the millstone, power cord first, pulling the cord down through the millstone. Place the water Pump in the center of the larger bowl. Insert both the light and pump power cords down through the hole in the floor of the bowl and pull them out from underneath, toward your power supply. At floor level, open the slits in the Stopper and place each power cord in the groove sized for it. Then close the stopper slits and press the small end of the stopper into the hole to make the bowl water tight. It is good to leave about 1/8” of the stopper above the hole level for easy gripping if you want to remove it later.

3) Holding the Slotted Barbed Adapter under the millstone, lay the light power cord in the slot and gently thread the adapter into place underneath the millstone. Push one end of the Water Tube onto the barb of the adapter. Slip the Flow Restrictor clamp onto the middle of the tube and tighten it just enough to hold it in place. *(It can be tightened more later if you want to reduce the water flow.)*

4) Thread the other adapter into the top of the pump. With plenty of help, lift the millstone over the bowl, push the open end of the water tube onto the pump adapter, then gently set the millstone down on the center of the bowl.

5) Slip the short, Clear Pipe into the middle of the millstone, through the ring light. Fill the bowl with water. Read pump and light instructions. Turn on the power. If the pump does not immediately begin working, there may be an “airlock” within the impeller chamber. Simply unplug and plug in a few times and it should start. Csd

72021

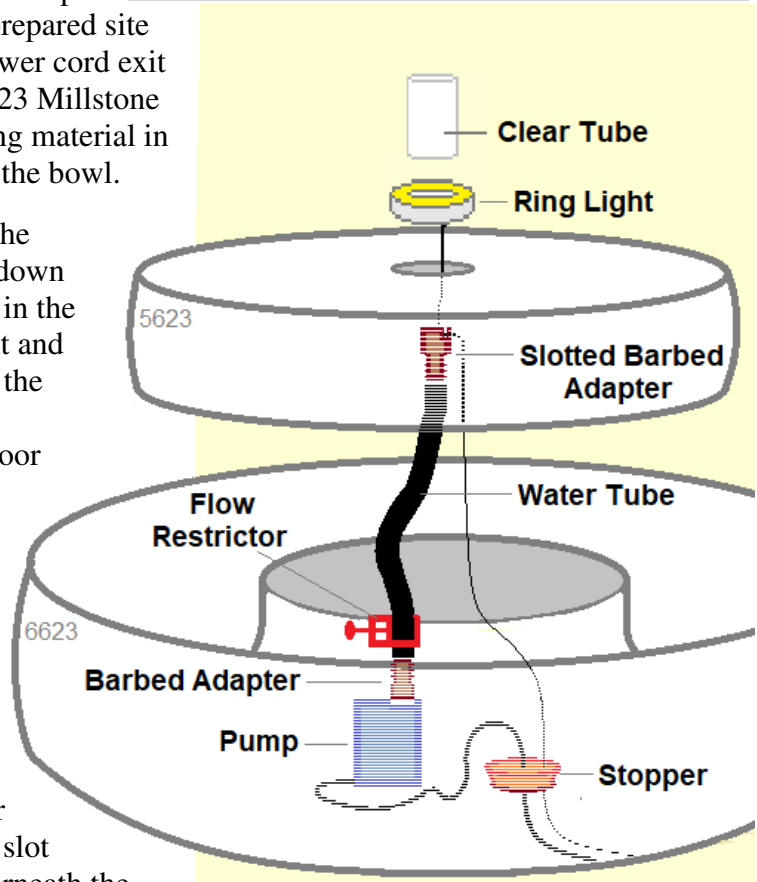

## Online Resources

Products: [www.henristudio.com/products](http://www.henristudio.com/products)  
FAQs: [www.henristudio.com/faq](http://www.henristudio.com/faq)  
Warranty: [www.henristudio.com/warranty](http://www.henristudio.com/warranty)  
Contact : [www.henristudio.com/contact-us](http://www.henristudio.com/contact-us)

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

## IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.