

BERMUDA



Feature Pumps

Ideal for outdoor water features

Instruction Manual

IMPORTANT: Please read this instruction manual carefully before using this product. Keep the manual safe for future reference.

Thank you for purchasing a Bermuda outdoor Feature Pump. Feature Pump is specifically designed to power a variety of self-contained water features and connects quickly and simply to flexible pipes and hoses. Each pump includes flow control on the pump body, to enable water feature adjustment, making the flow of water just right. To ensure that this product is safely and correctly used and at its optimal performance, please read this instruction booklet carefully before use.

Attention

1. Keep out of the reach of children.
2. A drip loop should be installed in the cable, to ensure that water cannot travel down it and into an electrical socket.
3. An RCD (of which the rated working current is not over 30mA) must be installed when using the pump, and the power socket must be connected to an earth.
4. Bermuda Feature Pumps are designed for under water use only. Running the pump dry, without water inside the pump, is strictly prohibited. Dry running may also cause irreparable damage, and invalidate any warranty.
5. The device must not be used to pump any flammable liquids or water with a temperature higher than 35°C.
6. Always disconnect the power supply when handling, servicing or maintaining the pump.
7. Do not attempt to unplug the pump or disconnect from the power supply with wet hands.
8. Do not carry or retrieve the pump from the water feature by pulling the electrical cable.
9. The power cable cannot be replaced. If the power cable becomes damaged near to the pump body it cannot be replaced, and electricals are sealed inside the unit to make them waterproof.

Features

- Highly insulated and water proof.
- New, high performance impeller design.
- Built-in overcurrent and overheat protection.
- Multi-functional design, suitable for water filters, fountains or pumping water in a variety of situations.
- Simple to use and maintain.
- Steady and quiet performance.

Usage

Suitable for outdoor water features only. Can be run continuously, 24 hours per day.

1. The device should be placed in enough water to ensure that the pump body is always covered. The water feature hose should be connected to the pump outlet, which will then feed water to the outlet in the feature. Hose clips (not supplied) may be used for extra fastening, but are not supplied.
2. The pump output is adjustable. To turn water flow up or down slowly turn the disc on the front of the pump either clockwise or anti-clockwise, watching water output as you do so.
3. When first connected to the power, spend 30 minutes checking that the pump is running as it should, steady, normal, and without any abnormal flow, or fault. Check connections to the water feature to ensure there are no leaks.

Maintenance

Regularly inspect and clean the pump housing to make sure it has not accumulated too much dirt, algae and leaves. Visibly reduced pump flow is a strong indicator that either the pump intake is nearly completely blocked, or the hose or water feature is blocked, and needs cleaning. Always check that the Feature Pump is submerged in water. Small water reservoirs can lose water rapidly through evaporation, causing the pump to run dry, and flow to stop.

Cleaning

Step 1: Remove the front casing from the pump by squeezing the sides and pulling it away.

Step 2: Turn the impeller housing anticlockwise to expose the impeller inside.

Step 3: Take care when handling the ceramic impeller shaft. This is not covered by warranty. Ensure it is clean, and not cracked or broken.

Step 4: Inspect the impeller and clean if necessary. All blades should be intact and the magnet clean, intact and not cracked or warped.




Step 1



Step 2



Step 3

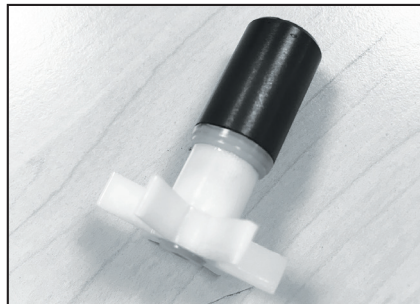


Step 4

Trouble shooting

1. If the pump is not working after being connected, please check if the plug is loose, if it has been properly wired into the plug, RCD plug or outdoor switchbox, and that the plug and cable are not damaged. Never dismantle the pump by yourself if malfunction occurs. Check that the RCD has been reset and power to outdoor electricals is switched on, and not tripped or fused.
2. If the motor of the pump is running but with less water flow or water pressure, check that the pump housing is not already blocked by too much dirt and leaves, and that the Head Max (height of water it is pumping to,) has not been exceeded.
3. Check that there is sufficient water in the water feature reservoir to ensure that the pump is under water at all times.

Exploded view

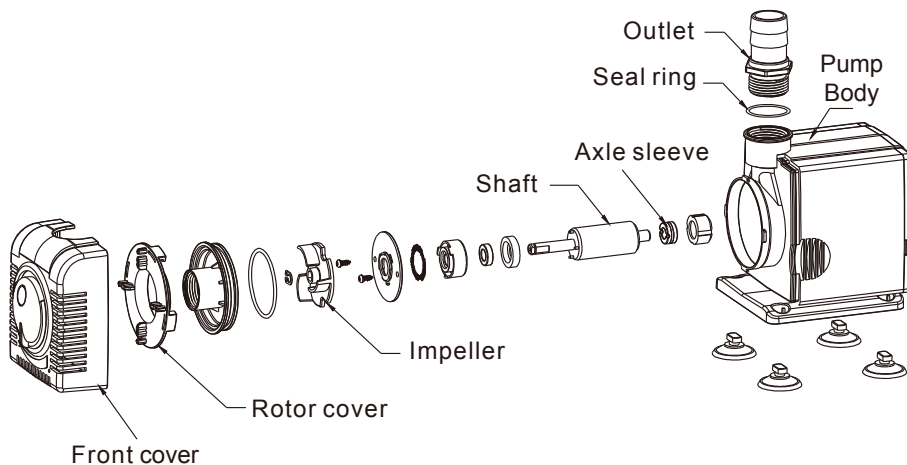

Specifications

MODEL	BER CODE	OUTPUT	POWER	HMAX	HOSETAILS	DIMENSIONS
400	BER0001	350lph / 77gph	6W	0.8m	13mm	69 x 54 x 82mm
750	BER0057	750lph / 165gph	12W	1.5m	13mm	75 x 57 x 92mm
1000	BER0058	1,000lph / 220gph	16W	1.8m	16mm	89 x 70 x 111mm
1500	BER0059	1,500lph / 330gph	25W	2.5m	19mm	104 x 93 x 140mm
2000	BER0392	2,000lph / 440gph	43W	3.0m	19mm	118 x 101 x 158mm
3000	BER0083	3,000lph / 660gph	68W	3.5m	25mm	132 x 106 x 172mm
4000	BER0084	4,000lph / 880gph	75W	3.0m	25mm	132 x 106 x 172mm

Guarantee

This product is guaranteed against defects in material and workmanship for **one year** from the date of purchase, under normal usage. The guarantee **DOES NOT APPLY** in case of improper use, negligence, lack of maintenance or accidental damage to the pump. If the pump fails due to a manufacturing fault within this period it will be either repaired or replaced free of charge. Moving parts or wearable parts including the impeller and any washers or O rings are not covered by the guarantee and are available to order from your Bermuda retailer.

Should your Bermuda product stop working refer first to trouble shooting and if this does not help, return the product to the place of purchase.

Liability is limited to replacement of the faulty product only. No other costs will be reimbursed. This guarantee is not transferable and does not affect your statutory rights.

Do not attempt to tamper with or access electrical components inside the pump body. Doing so will invalidate the warranty.

The manufacturer or supplier shall not be responsible, or held liable for any damages caused by defective components or materials of this product, or for loss incurred by interruption of service, or any consequential/incidental damages and expenses arising from the production, sale use or misuse of this product or any other consequential loss.

Any warranty claim must be accompanied by a valid, dated proof of purchase. Evolution Aqua, Bermuda, its distributors and dealers shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this product.

The installation and use of your product outside of our recommendations as printed in this manual may also void the warranty.



www.bermudawatergardens.com

BERMUDA an Evolution Aqua brand.
Evolution House, Kellet Close, Wigan, Lancashire, WN5 0LP

DISTRIBUTED BY: Certikin, Witan Park, Avenue 2,
Station Lane Industrial Estate, Witney, Oxfordshire, UK, OX28 4FJ