

Potting Shed Fitting Instructions

The floor is comprised of boards fixed to bearers. It is simply laid in place and will be held there by the weight of the shed. Check with a spirit level that the base is horizontal.

Position rear panel on and over floor and attach side section to rear with 40mm screws from inside.

Repeat for the rest of the shed, square up on floor and screw down.



Lift front glass panel into place and fix using x4 coach bolts (supplied). Before glazing slide the bench through side window and position so it rests on both side panels. Fix support legs in position on internal spars and attach to bench and floor till secure.

Remove glass retaining strips from the front panel, fit glass and carefully replace the strips. Remove beading from side panels and fit remaining glass.

Fit roof in position and secure from inside.

Unroll felt and begin at the rear of the building with the half strip to ensure that the felt hangs over the rear of the roof to create a rain drip. Work towards the front of the shed using half strip to finish.

Fix all barge boards, corner latts and silicone seal all the windows outside (not supplied).

Please note: We suggest the building is treated within one month of installation and every year thereafter, the floor should be well ventilated from underneath, also in time the roofing felt may need replacing, doing all this should prolong the life of the building.