

Hanging Heater Silver

User Instructions

69566



Technical Information

Power supply: 220 - 240V ~ 50Hz

Power rating: 900W/1200W/2100W

Ingress protection: IP24

Element type: Halogen

Life of lamp: Approximate maximum 5000 hours

Dimensions: H33.5cm x DIA58.5cm

Net weight: 3kg



 
These instructions form part of this appliance. Please be sure to read them before use and keep for future reference. This product is for domestic use only and should not be used commercially or for contract purposes.

Produced in PRC for La Hacienda Ltd
Hangar 27, Site C, Aston Down Airfield, Nr Stroud, Glos, GL6 8HR, UK
www.lahacienda.co.uk

Care and safe use guidelines

SAFETY INFORMATION

- Product labels, warnings and rating plates affixed with adhesive or other permanent means must never be removed; doing so will invalidate the product's regulatory compliance and its warranty.
- The integral plug(s) of this appliance must not be cut off or modified for any purpose including: extending the cable length, wiring directly into an electrical spur, or modification of any type. Doing so may cause electrical safety or fire hazards and thereby invalidate the product warranty.
- Caution - some parts of this appliance can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.
- Do not use this heater in the immediate surroundings of a swimming pool, hot tub, pond or any vessel containing water.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance after it has been placed or installed in its intended normal operating position. Additionally, they shall have been given supervision or instruction concerning use of the appliance in a safe way, and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- Ensure any person operating the heater has the capability to do so without risking injury to themselves or others. Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not move the unit when in use. Wait until the heater is completely cool before moving and check that it has been unplugged from the electrical socket.
- Never connect this appliance using a multi-way socket extender, plug expander or travel plug adaptor, etc.
- Never jolt or drop this appliance: doing so can cause glass heat bulb(s) to crack and fail violently.



BATTERY WARNING: The remote-control handset included with this appliance incorporates a lithium coin cell battery. If this battery is changed or removed, it must be stored out of the reach of children.

POSITIONING THE APPLIANCE

- This appliance is designed and intended for outdoor use only.
- This appliance contains hot and arcing components inside. Do not use in areas where petrol, paint, explosive and/or flammable liquids are used or stored.
- This appliance must NOT be located:
 - immediately below an electrical socket outlet;
 - within close proximity (1m) of any combustible materials e.g. furniture, trees, leaves, dry grass and bushes, etc;
 - with the heating element facing upwards;
 - where the cable could cause a trip hazard.
- This appliance must be located at least 1.8m from the ground, and:
 - at least 0.25m away from a ceiling, or overhanging joists, etc;
 - suspended in a stable orientation using the support linkage provided, according to the Assembly Instructions.
- This appliance must be switched off and allowed to cool before moving, repositioning or changing the orientation.

ELECTRICAL EXTENSION LEADS

- If it is necessary to use an extension lead to connect this appliance, be sure that it meets the following specification:
 - Tested and manufactured to BS 1363-2, or equivalent national Standards for electrical plug/sockets.
 - Rated at 13A, 240 Volts, 3kW or higher
 - IP rated to IP54 or higher
 - Single socket extender only
- To protect against electric shock, it is recommended to connect a Residual Current Device (RCD) between the extension cable's plug and the wall mains socket.
- Ensure that the extension lead is fully unwound from its cable tidy or reel, before connecting any heating appliance.
- Never connect more than one extension lead in line with a heating appliance.
- Never use an extension lead in wet conditions, in rain or whilst using a hose pipe.

MAINTENANCE & STORAGE

 
 
 
- Switch off then unplug this appliance before cleaning.
- Clean only with a soft damp cloth, and mild detergent if necessary; allow to dry naturally before re-connecting the mains plug. Do not use any abrasive substance or cloth for cleaning as this could damage the surface of the appliance.
- Avoid touching the heating element as finger marks will cause its premature failure. Any inadvertent finger marks should be wiped off using a soft cloth and methylated spirit or isopropyl alcohol.
- This appliance contains no user-replaceable parts. Seek the services of a certified electrician to replace the bulb/element if necessary.
- Do not leave this appliance outdoors overnight or when not in use. Store in a clean, dry environment free from moisture and above 0°C.

DISPOSAL


This symbol means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Please contact your local authority for further details of your nearest designated collection point.



Parts List

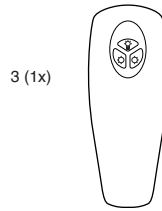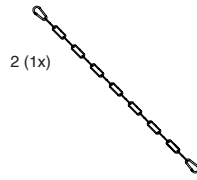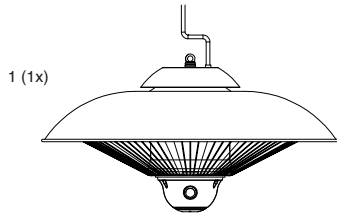

Assembly Diagrams

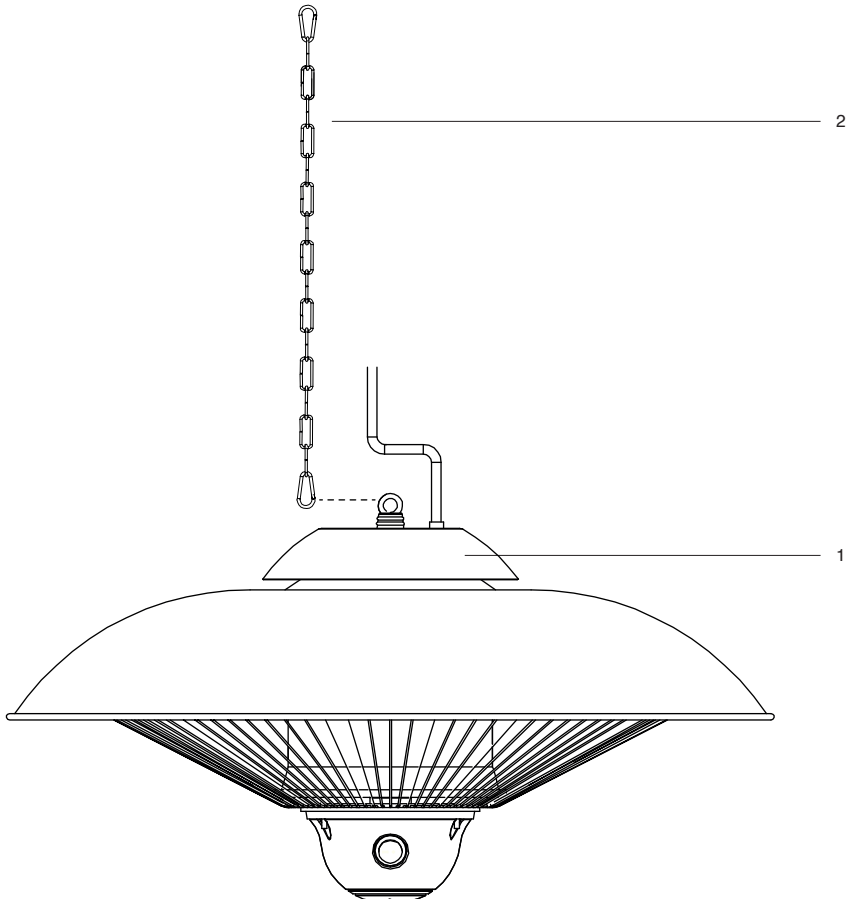 

Assembly Instructions

IMPORTANT! - Remove any packaging before use, but retain the safety instructions and store them with this product.

STEP 1 - Locate chain clip at the top of the heater (1).

STEP 2 - Locate chain clip (2) firmly and completely onto the ceiling hook (not included).

STEP 3 - To adjust the height of the heater lift the unit and hook the desired chain link (2) over the ceiling hook (not included).

The product is now ready to use but please ensure you have read these instructions thoroughly prior to use.

Operating The Appliance

- Plug the Patio Heater into a grounded 220-240v 50Hz power outlet.
- Only operate the heater when it is in the upright position.
- This appliance is equipped with three heat settings.
- The ON/OFF switch on the heater is used to control the power of the heater.
- Touch the button once to operate the heater on 900W power.
- Touch the button twice to operate the heater on 2100W power.
- Touch the button three times to activate the LED ambient lighting without heat.
- Touch the button four times to activate the LED light ambient lighting and to operate the heater on 2100W power.
- Touch the button five times to shut off the light and heat.

Remote Control Operation:

- To operate the LED light, press the top button of the remote control.
 - Press the button on the left side for 900W, press the button on the right side for 1200W and press both buttons for 2100W.
 - If you lose the remote control, you can still operate by using Activation Button on the appliance.
-

Replacing The Batteries

