

INSTRUCTION FOR THE 5898F2

1) To set up your Henri Studio Fountain, carefully prepare a firm, flat ground surface. Provide a lower profile area under the back right corner to allow the pump cord to exit the basin. Each of the two concrete fountain pieces weight over 300 lbs., therefore three or four strong people are recommended along with lifting equipment if possible.

2) Set the 5898B basin down on your location. Place the pump in the center of the 5898B basin. Pass the pump cord out the notch at the back top edge of the basin.

3) Tip the 5898A top piece onto its back. Push the longer water tubes onto the barb connection of each AB870 plume light. Take note in the drawing which light receives which length of cord. From the top side of the 5898A, slide the three plume light/cord assemblies through the mounting holes as shown, tube and power cord first, and pull the power cords out from underneath. Gather the three power cords together and tuck them behind the 5898B basin.


4) Place one restrictor clamp near the bottom end of each tube. Connect the bottom end of the three tubes to the double tee assembly. Press the remaining six inch long tube to the other end of the cross tee.

5) With plenty of help, lift the 5898A top piece and gently place it in the middle of the basin. Make sure not to pinch any tubes or power cords.

6) Thread the Barbed Adapter into the pump and push the open end of tube onto the adapter.

7) Connect the three light power lines to the three-way power adapter. Then connect the adapter to the light transformer.

8) Read your pump and light instructions. Fill basin with water. Plug pump and lights into a GFCI protected power source. If the pump does not immediately create a water flow, there may be an "air lock" within the pump impeller chamber caused by a bubble of air. This is common. Simply unplug and plug in the pump several times to clear the air lock. Csd

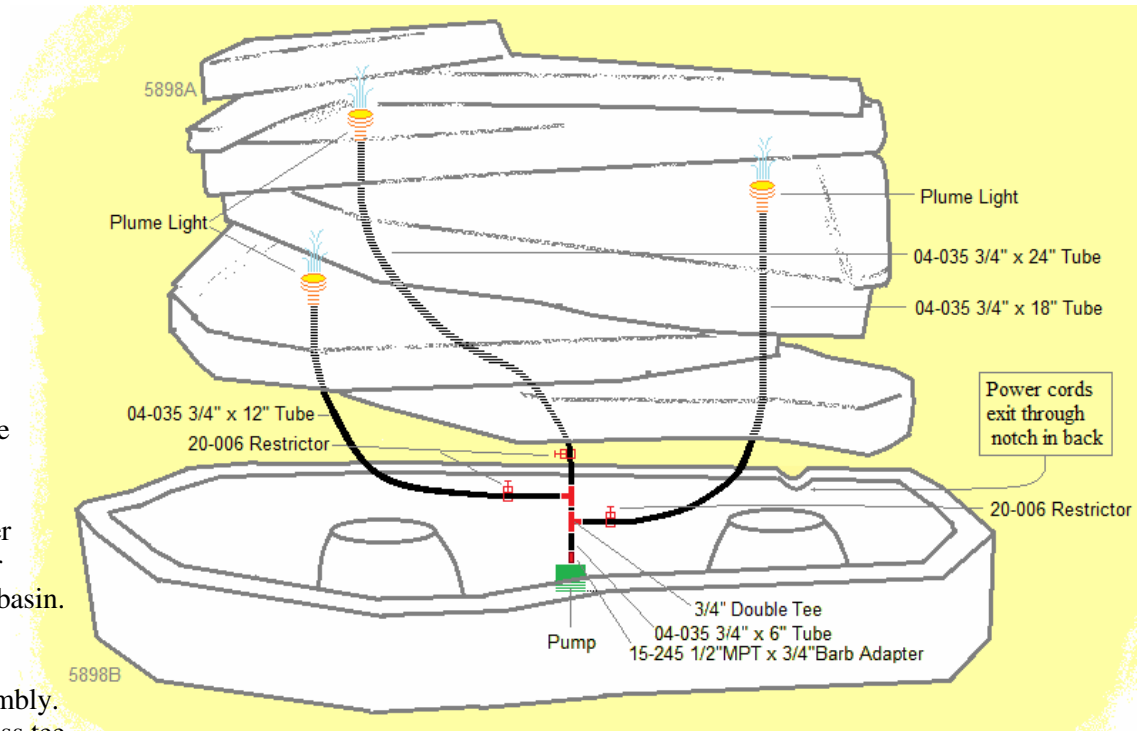

IMPORTANT – WINTER CARE

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps.
- * Remove plugs / stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Place an absorbant material like burlap, blankets, etc. inside vases/bowls and cover all with a Henri fountain cover.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use salt or chemical ice removers as these may damage concrete.