 
© LA HACIENDA[®] Table Top Electric Heater

User Instructions

69516 69535



Tools required (not included)



Technical Information Power supply: 220 - 240V ~ 50Hz Power rating: 2100W Ingress protection: IP44 Element type: Halogen Life of lamp: Approximate maximum 5000 hours Dimensions: H89 x D50cm



These instructions form part of this appliance. Please be sure to read them before use and keep for future reference. This product is for domestic use only and should not be used commercially or for contract purposes.

Produced in PRC for La Hacienda Ltd Hangar 27, Site C, Aston Down Airfield, Nr Stroud, Glos, GL6 8HR, UK www.lahacienda.co.uk

69516-69535_Table_Top_Electric_Heater_FS_IM_1.6

Care and safe use guidelines

IMPORTANT: This appliance incorporates an anti-tip cut-out switch so will only operate in its fully assembled, upright orientation.

SAFETY INFORMATION

- Product labels, warnings and rating plates affixed with adhesive or other permanent means must never be removed; doing so will invalidate the product's regulatory compliance and its warranty.
- The integral plug(s) of this appliance must not be cut off or modified for any purpose including: extending the cable length, wiring directly into an electrical spur, or modification of any type. Doing so may cause electrical safety or fire hazards and thereby invalidate the product warranty.
- Caution some parts of this appliance can become very hot and cause burns. Particular attention must be given where children and vulnerable people are present.
- Do not use this heater in the immediate surroundings of a swimming pool, hot tub, pond or any vessel containing water.
- · Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance after it has been placed or
 installed in its intended normal operating position. Additionally, they shall have been given supervision or instruction
 concerning use of the appliance in a safe way, and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- Ensure any person operating the heater has the capability to do so without risking injury to themselves or others. Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Do not move the unit when in use. Wait until the heater is completely cool before moving and check that it has been unplugged from the electrical socket.
- Never connect this appliance using a multi-way socket extender, plug expander or travel plug adaptor, etc.
- Never jolt or drop this appliance: doing so can cause glass heat bulb(s) to crack and fail violently.

POSITIONING THE APPLIANCE

- · This appliance is designed and intended for outdoor use only.
- This appliance contains hot and arcing components inside. Do not use in areas where petrol, paint, explosive and/or flammable liquids are used or stored.
- This appliance must NOT be located:
 - immediately below an electrical socket outlet;
 - within close proximity (1m) of any combustible materials e.g. furniture, trees, leaves, dry grass and bushes, etc;
 - with the heating element facing upwards;
 - where the cable could cause a trip hazard.
- This appliance must be located:
 - · with the heating element facing the users, for optimum benefit;
 - on a flat, level, surface, without rocking or instability; It incorporates an anti-tip cut-out switch and intermittent
 operation may occur if used on an unstable surface.
 - optionally, on a table-top if designed to do so.
- · This appliance must be switched off and allowed to cool before moving, repositioning or changing the orientation.

ELECTRICAL EXTENSION LEADS

- If it is necessary to use an extension lead to connect this appliance, be sure that it meets the following specification:
 - Tested and manufactured to BS 1363-2, or equivalent national Standards for electrical plug/sockets
 - Rated at 13A, 240 Volts, 3kW or higher
 - IP rated to IP54 or higher
 - Single socket extender only
- To protect against electric shock, it is recommended to connect a Residual Current Device (RCD) between the
 extension cable's plug and the wall mains socket.
- Ensure that the extension lead is fully unwound from its cable tidy or reel, before connecting any heating appliance.
- Never connect more than one extension lead in line with a heating appliance.
- Never use an extension lead in wet conditions, in rain or whilst using a hose pipe.

 
MAINTENANCE & STORAGE

- · Switch off then unplug this appliance before cleaning.
- Clean only with a soft damp cloth, and mild detergent if necessary; allow to dry naturally before re-connecting the
 mains plug. Do not use any abrasive substance or cloth for cleaning as this could damage the surface of the
 appliance.
- Avoid touching the heating element as finger marks will cause its premature failure. Any inadvertent finger marks should be wiped off using a soft cloth and methylated spirit or isopropyl alcohol.
- This appliance contains no user-replaceable parts. Seek the services of a certified electrician to replace the bulb/ element if necessary.
- Do not leave this appliance outdoors overnight or when not in use. Store in a clean, dry environment free from moisture and above 0°C.

DISPOSAL


- Y This symbol means that used electrical and electronic equipment (WEEE) should not be mixed with general
- household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Please contact your local authority for further details of your nearest designated collection point.

Parts List



Prior to assembly, read the instructions carefully. Check all parts against this parts list. Carry out assembly on a soft surface to avoid scratching the paint. Please retain this information for future reference.

Assembly Diagrams

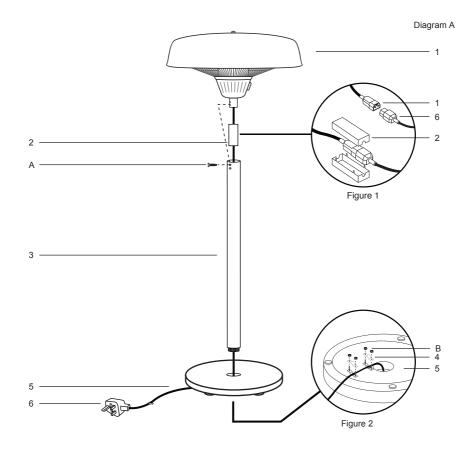

Assembly Instructions

IMPORTANT! - Remove any packaging before use, but retain the safety instructions and store them with this product.

- STEP 1 Attach the pole (3) into the base (5) by screwing them in a clockwise direction.
- STEP 2 Feed the power cable (6): female plug first, up through the hole in the base (5) and through the bottom of the pole (3) then connect the female end to the male end of the cable attached to the head of the unit (1). Encase the connected plug inside the plastic housing (2). Please refer to diagram A, figure 1.
- STEP 3 Push the head of the unit (1) onto the top of the pole (3) aligning the holes on the heater head (1) with the holes on the top of the pole (3). Once the holes are aligned, secure the heater head into position using 2 x screws (A).
- STEP 4 Fix the power cable (6) to the base (5) using 2x pre-attached plastic fittings (4) and 4x pre-attached nuts (B). Please refer to diagram A, figure 2.

The product is now ready to use but please ensure you have read these instructions thoroughly prior to use.

Operating The Appliance

- Ensure the unit is plugged into the correct power supply.
- To turn the unit ON push the switch below the head on the 'l' symbol.
- To turn the unit OFF push the switch on the 'O' symbol.