


# SHED BASE

Issue 0414

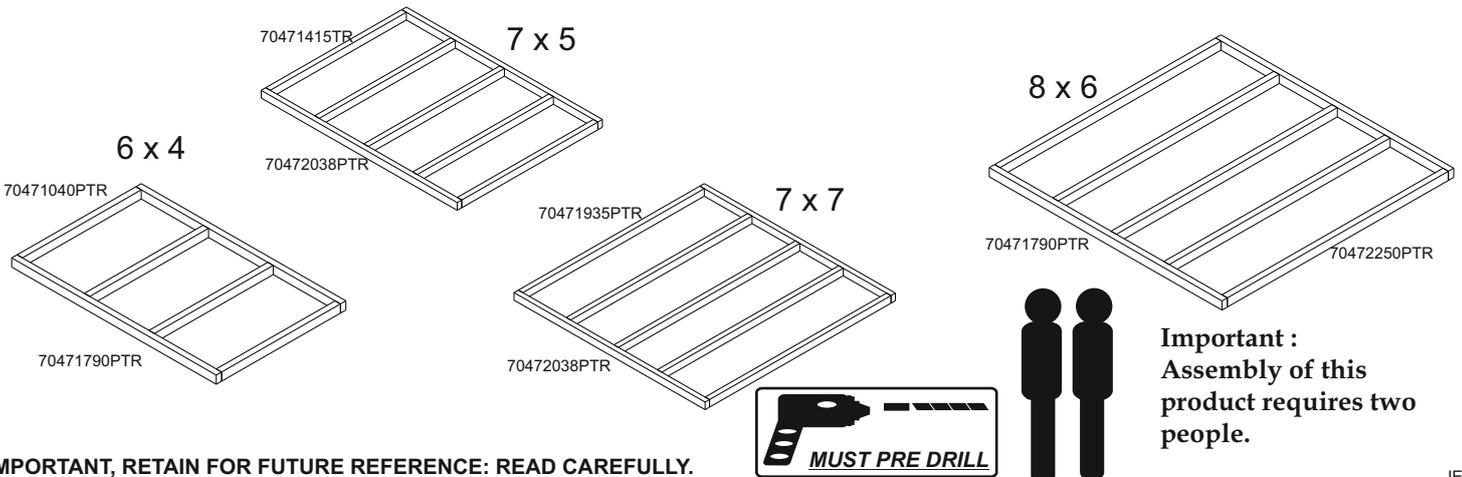

**Important :**  
 Assembly of this product requires two people.

**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**


Thank you for choosing this product manufactured by the UK's largest manufacturer of timber garden products. In order to gain the most benefit from it, please note the following:

- Exercise particular care and follow instructions.
- This base is pressure treated to ensure the longevity of all timber components and protect against rot. This may leave a colour difference on some parts that will even out as the moisture contents stabilises.
- In line with your statutory rights, please check all parts prior to assembly, as assembly of damaged parts may be deemed to be acceptance and this may affect the remedies you are entitled to. If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g painted), the manufacturer cannot be held liable for any resulting damage.
- Timber is a natural material. It will shrink and swell as a result of varying moisture content.
- Please keep all plastic bags and small parts away from children in order to reduce the risk of suffocation.
- If there are any technical queries with the product, please contact our customer help line on 0333 7777 089 between the hours of 8.30 am and 5.00 pm Monday to Friday.

| LONG BATTEN         |
|---------------------|
| (6x4) 2x70471790PTR |
| (7x5) 2x70472038PTR |
| (7x7) 2x70472038PTR |
| (8x6) 5x70472250PTR |



| SHORT BATTEN        |
|---------------------|
| (6x4) 4x70471040PTR |
| (7x5) 5x70471415PTR |
| (7x7) 5x70471935PTR |
| (8x6) 2x70471790PTR |

| METAL STAKE (SHEDBASEMFP)° |
|----------------------------|
| (6X4) Qty 6                |
| (7x5) (7x7) (8x6) Qty 9    |

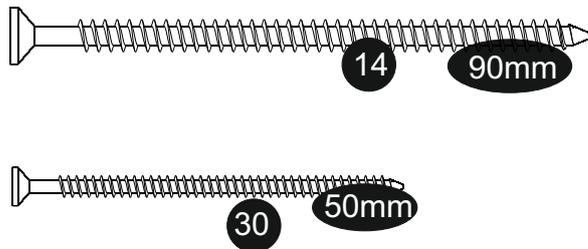

**BASEMSFP (FIXING PACK)**

**REQUIRED TOOLS : (NOT SUPPLIED)**

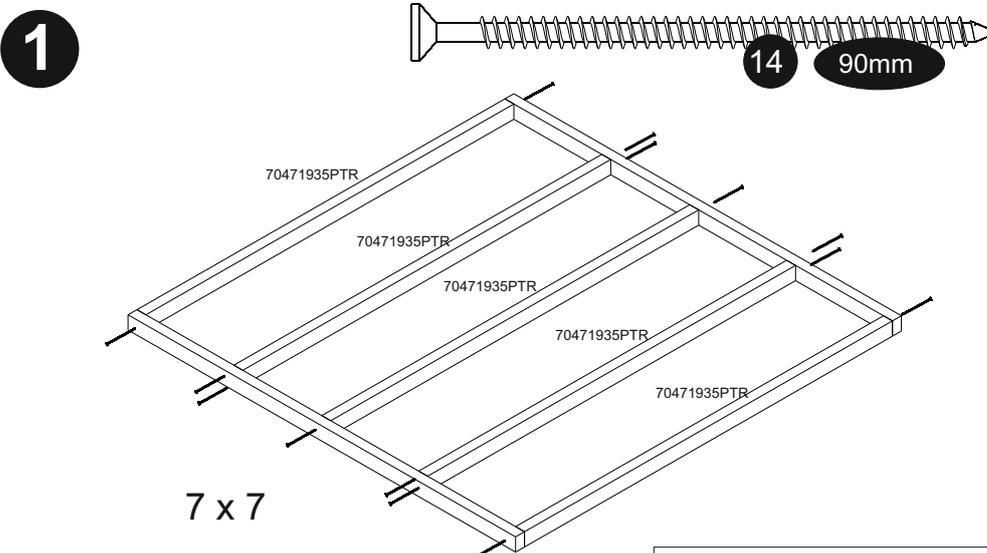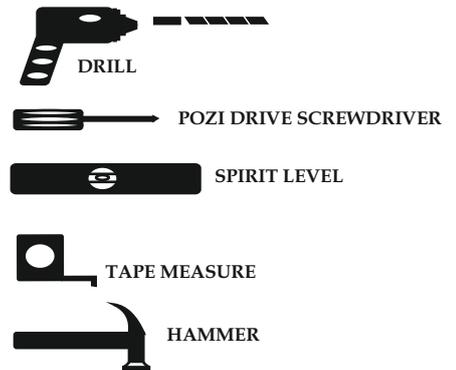


Fix the Battens together as shown making sure the middle (short battens) are equally spaced. Fix in place using 90mm screws. Use 2x90mm screws for each end of the two (short battens) as shown. This applies only for the 7x7, 8x6 and the 7x5 bases.


**Attention:**

You may need to move the two end (shorter) battens inwards to make sure that the floor bearers of your shed are in contact and supported.


**1** 6 x 4

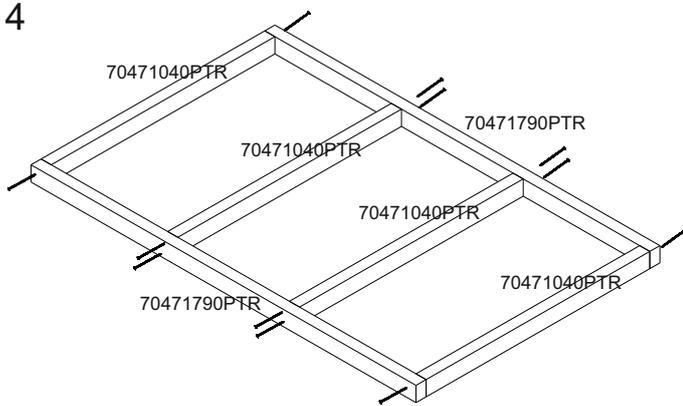

Fix the Battens together as shown making sure the two middle **70471040PTR** (short battens) are equally spaced. Fix in place using 90mm screws. 2x90mm screws for each end of the middle **70471040PTR** (short battens).

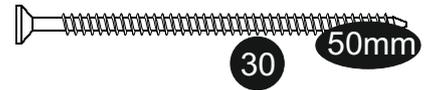


**2** 8 x 6

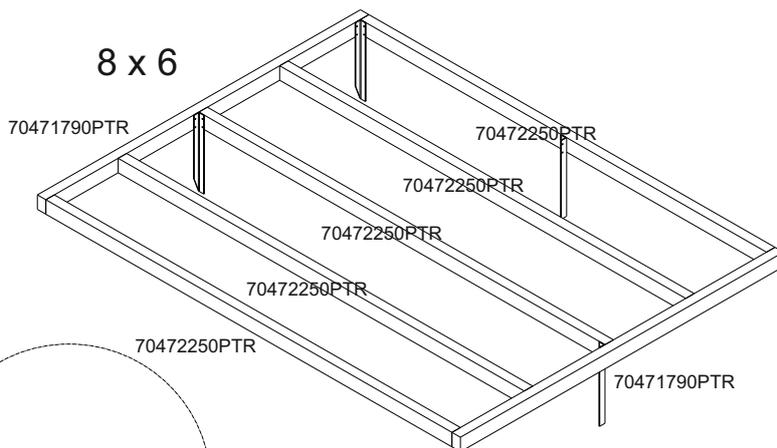


Position the base in the desired area. Fix a metal stake at the highest corner using 50mm screws. (Make sure the holes are pre-drilled).

Using a spirit level to keep the base level, position the remaining metal stakes into the ground in the correct positions within the frame. Mark and pre-drill holes on base.

You may need to move the metal stakes as required due to ground obstructions and to keep the base level.

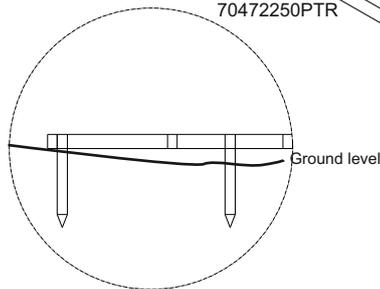

**3** 8 x 6

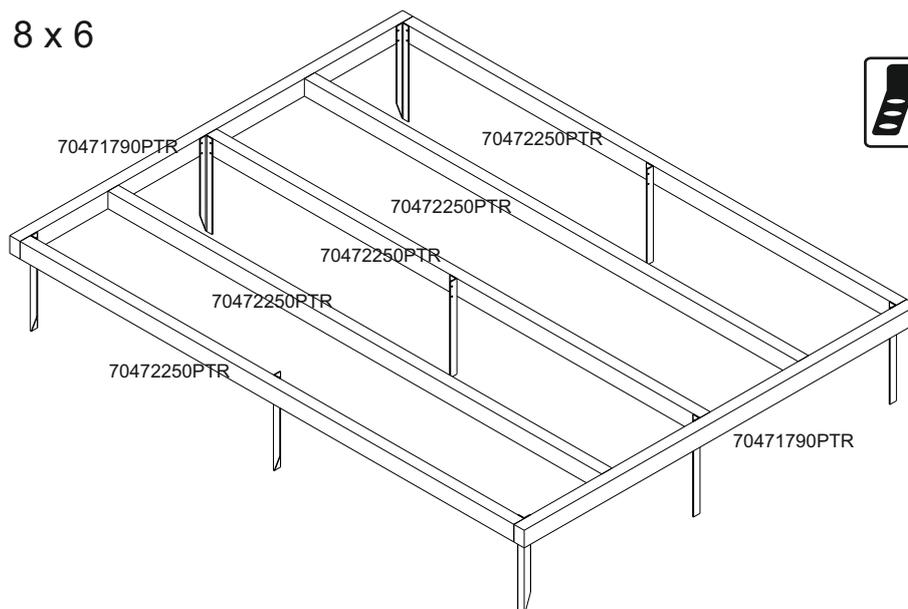

**Biocidal Product Regulation (EU 528/2012) Article 58 Information**

This article contains timber treated with Celcure AC-500, incorporating biocidal products to give protection against wood destroying insects & wood rotting fungi.

**Contains:** Basic copper carbonate (Copper (II) carbonate – Copper (II) hydroxide (1:1)), Boric acid, Benzalkonium chloride.

Wear gloves when handling freshly treated wood. Avoid breathing dust when cutting treated or untreated wood. Dispose of off-cuts responsibly –