

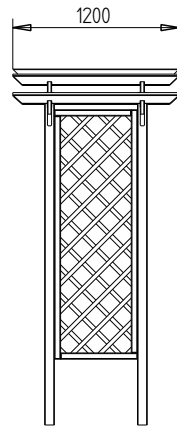


0209

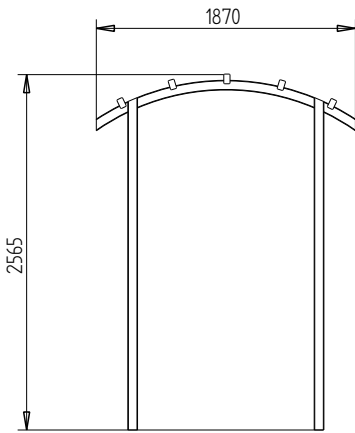

Important : Assembly of this Arch requires two people.

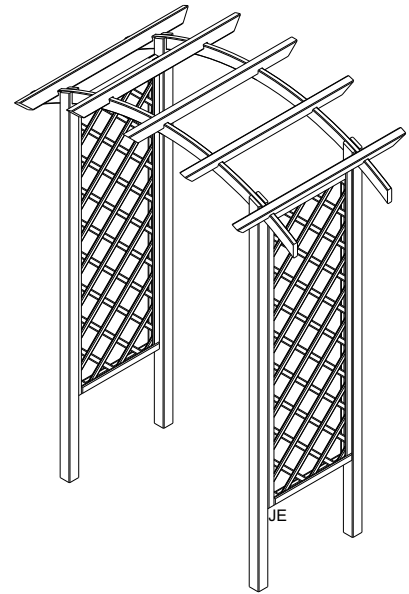


“IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY”


Thank you for choosing this Arch manufactured by the UK's largest manufacturer of timber garden products. In order to gain the most benefit from it, please note the following:

- Exercise particular care and follow instructions.
- This Arch is pressure treated to ensure longevity of all timber components and protect against rot. This may leave a colour difference on some parts that will even out as the moisture content stabilises. For extra protection from the elements we recommend that you treat your structure using a wood preservative treatment. Apply in accordance with the manufacturers instructions.
- Please ensure that you thoroughly check all component parts for quantity and quality before you commence building the product. If there are any missing parts, please contact the help line as shown immediately. The manufacturer cannot be held liable for damaged items once any part of the product has been fitted or altered in any way (e.g. Painted)
- Timber is a natural material. It will shrink and swell as a result of varying moisture content.
- Please keep all plastic bags and small parts away from children in order to reduce the risk of suffocation.
- **Important Note : Do not lean or stand on rafters during assembly they are not load bearing.**
- If there are any technical queries with the product, please contact our customer help line on 0844 248 9853 between the hours of 8.30 am and 5.00 pm Monday to Friday.

If securing into place using post supports, you will need to trim 30cm (12") from the bottom of each upright.

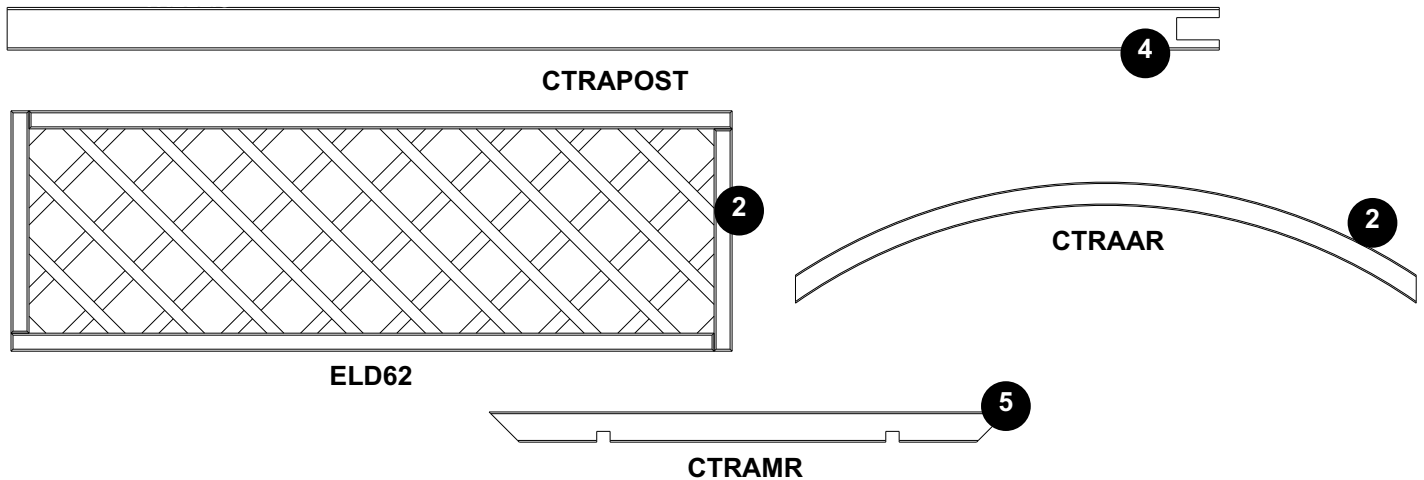

CTRAFP (FIXING PACK)

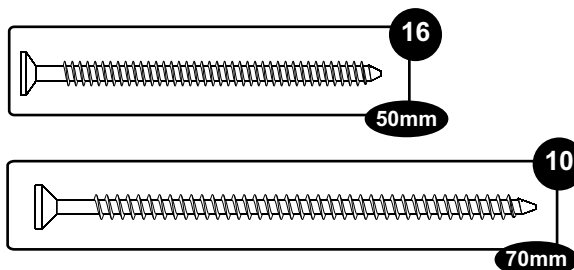

REQUIRED TOOLS : (NOT SUPPLIED)



DRILL



POZI DRIVE SCREWDRIVER



SPIRIT LEVEL



TAPE MEASURE





HAMMER

1

Secure a **CTRAPOST** on both sides of the **ELD62**. Making sure that the **ELD62** is 475mm from the foot of the **CTRAPOST**'s. Secure in place using 2x50mm screws on each side as shown, screwing through the **ELD62** into the **CTRAPOST**

Repeat the procedure with the other **ELD62**


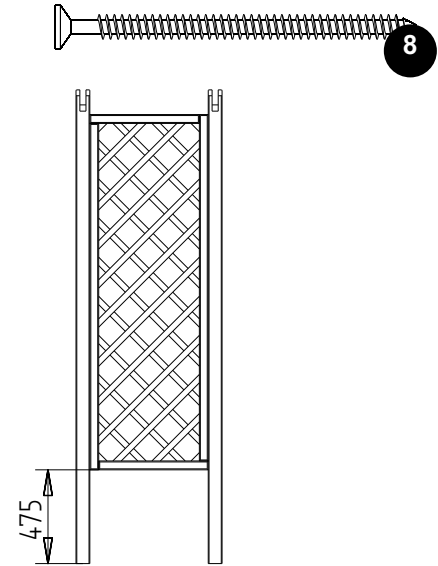
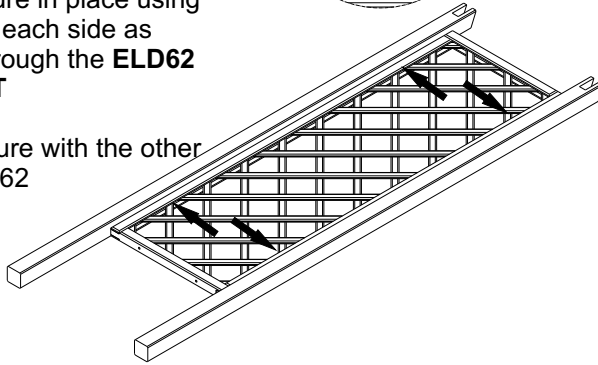


If you are not using a post support system it is recommended that you locate the posts 30cm into the ground.

2

Place both the completed **ELD64** assemblies on their side. Place a **CTRAAR** into the slots in the **CTRAPOST**'s. Position the **ELD62** assemblies so that they are in line and 1275mm apart. Secure in place using 2x50mm screws per post.




Repeat the procedure with the remaining **CTRAAR**.

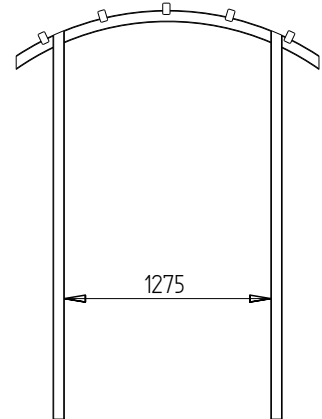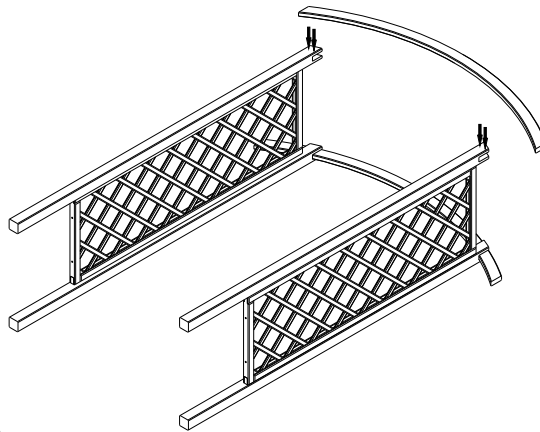

3

Place the **CTRAMR**'s onto the structure so that the notches fit securely onto the **CTRAAR**'s as shown.

Position equally and secure by screwing through the **CTRAMR** into the **CTRAAR** using 2x70mm screws per **CTRAAR**.

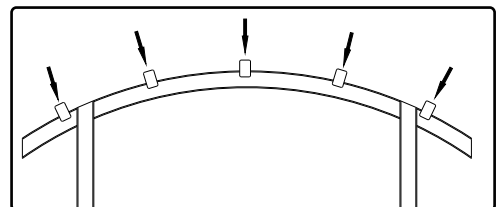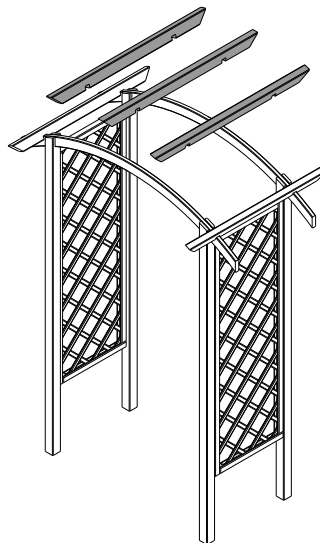

Forest Garden plc.
Units 291 & 296 Hartlebury Trading Estate
Hartlebury
Worcestershire
Dy10 4JB

Customer Services: 0844 248 9853
E-mail: info@forestgarden.co.uk

www.forestgarden.co.uk