

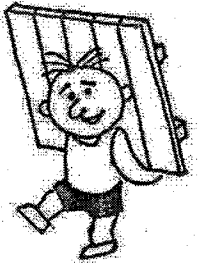


6



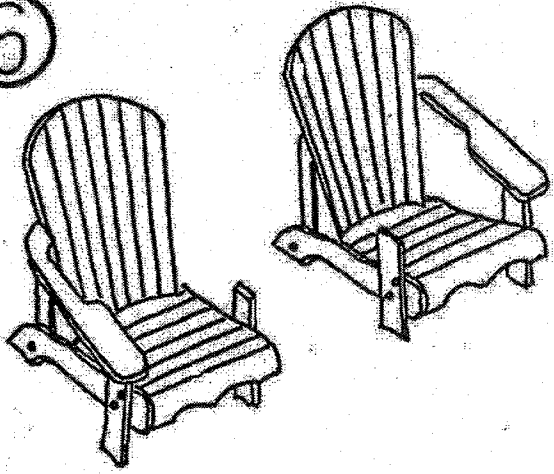


# Comfort Double Relax Chair


7

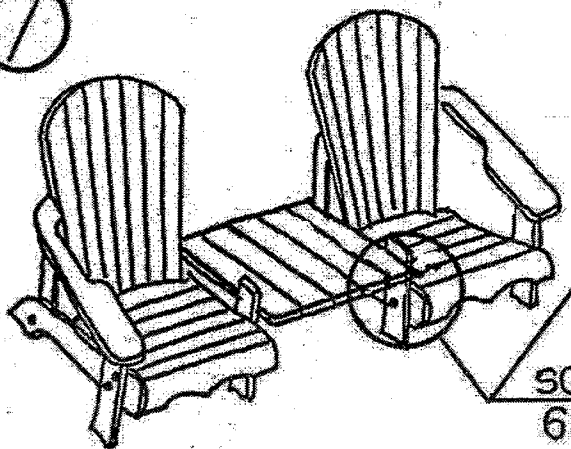


SCREW  
6x60

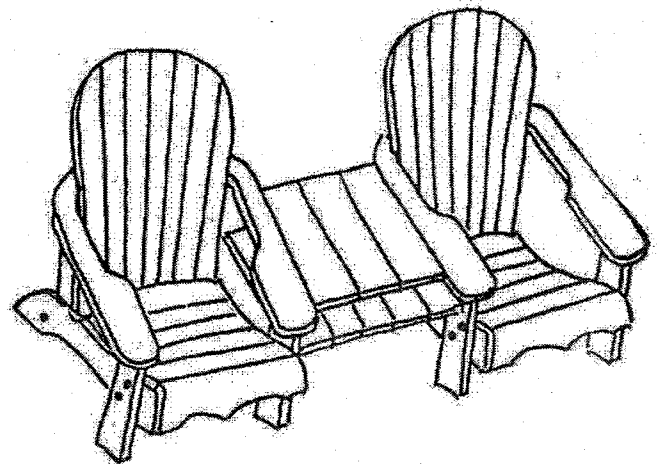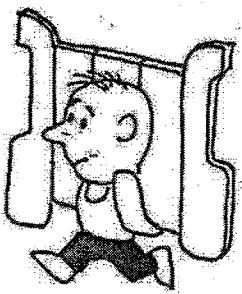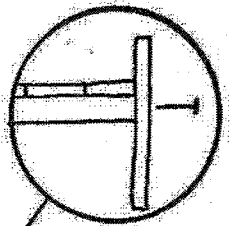

8

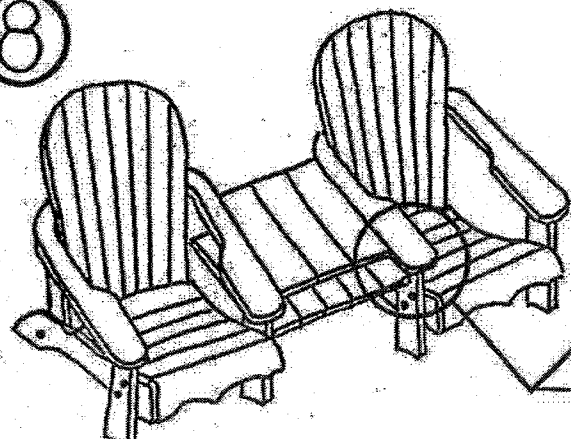

SCREW  
4x60

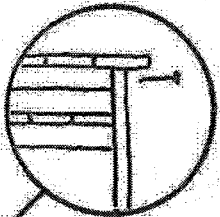



6x60

12X



6x60

4x60

4X 18X 12X





NUTS M-6


12X




1X

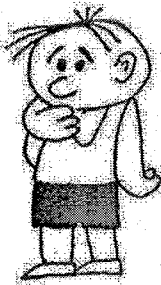


③

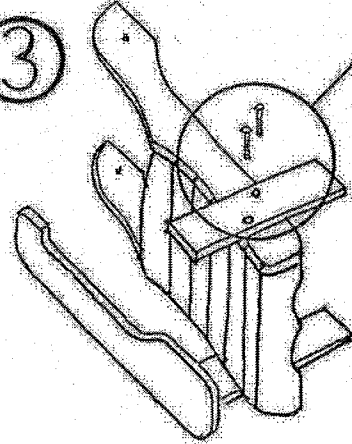

BOLTS 6x60  
+ NUTS

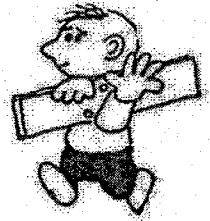



④

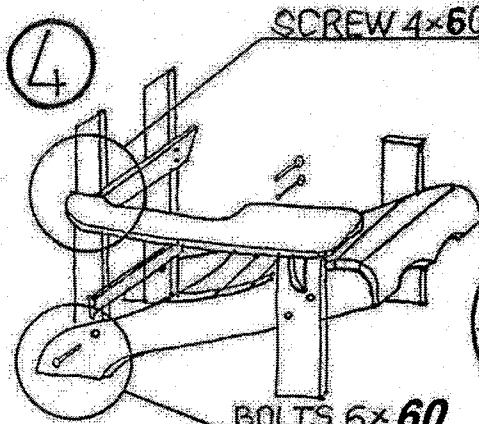



SCREW 4x60

BOLTS 6x60  
+ NUTS


This bolt must be  
screwed last.

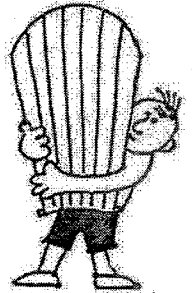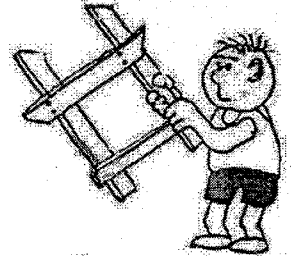

①

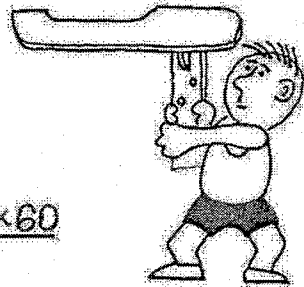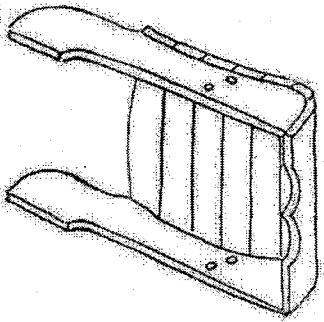

②

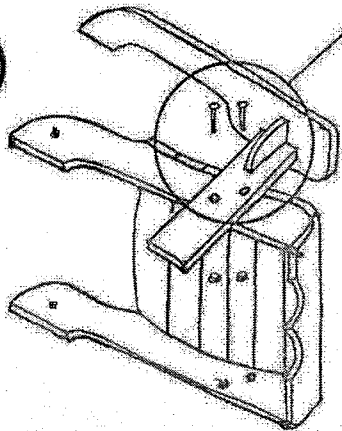

BOLTS 6x60  
+ NUTS

SCREW 4x60

⑤

