
Assembly Instructions

Product size:213x130x173cm (7.0x4.2 FT)

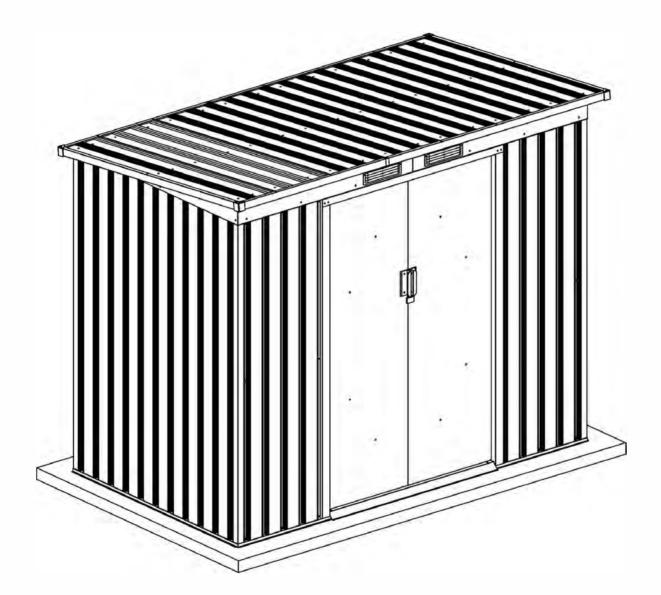

IMPORTANT TO FOLLOW THESE ASSEMBLY INSTRUCTIONS

Important, please retain for future reference.

Read carefully.

Requires two people and takes 3-4 hours for Installation.



Assembly Preparation

Before you begin:

Please check local building codes regarding footings, location and other requirements before beginning construction.

Reviewing all instructions and the appropriate information before you begin, make sure following the step sequence carefully for successful results.

Safety & Precautions:

- > Select a suitable level ground that is suitable for the size of your shed at your property.
- ➤ The owner must use Safety gloves provided when erecting your shed (2 pairs are provided with your shed)
- Your shed is supplied in multiple boxes for safe handling
- Your shed is DIY shed. Do not attempt to assemble the shed on a windy day.
- ➤ It is recommended to plan at least one whole day for the assembly of your shed by 2 persons.
- A suitable ladder will be required to assemble your shed we recommend you take necessary precautions to avoid injury.
- ➤ Be cautious with the tools used for the assembly of the shed .Familiarize yourself with the operation of all the power tools.
- For floor covering, the owner can purchase flooring material locally. We have supplied the foundation kit with the shed which can be used as floor base. Instructions about how to assemble foundation kit and how to fix flooring to the foundation kit are included in the manual.

Location and Base:

A good location for the storage building is a square and level area with good drainage.

The base is not included in the kit which may need purchase separately or may construct a foundation and anchoring system of your own. The recommended base size about 10 cm larger than the bottom rail of the shed.

A strong plastic sheet (thickness: at least 150µm) should be placed under the foundation to assist in reducing rising dampness from the soil, thus reducing condensation build up in the shed.

Your storage building **must be anchored** to prevent wind damage. Once secured, it is highly recommended applying silicone along the inside of the base rail to minimize condensation.

ASCOT 1 2 / 29




Parts and Parts List:

Before you start, separate and identify all the parts and hardware to be sure that you have all the necessary parts for your building (refer to the Parts List Page).

Do not attempt to assemble the building if parts are missing because any building left partially assembled may be seriously damaged by light winds.

Personal Tools you will Need:

(Please tear off the safety protection layer before the assembly, keep the part number label if needed)

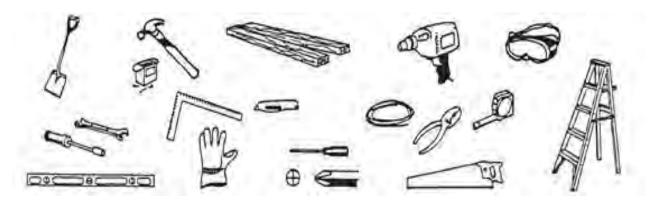

Safety must be put in the No. 1 position:


- 1. Select a dry and calm day for your assembly.
- 2. Team works (2 or more people) are required during the assembly. It is also recommended to finish the assembly in a day to avoid damage to the product or missing of some small parts.
- 3. Wearing safety gloves, eye protection and long sleeves during the assembly to prevent injury. Pay attention to the sharp edge of some parts.
- 4. Children and pets are not allowed entering into the construction site.
- 5. Never concentrate your total weight on the roof of the building. When using a step ladder make sure that it is safe.

Care & Maintenance:


- 1. Keep the shed clean with soft cloth, use water if necessary.
- 2. Keep the door tracks clear of dirt and other stuff that prevent them from sliding easily.
- 3. Clean the snow with necessary tools to make sure it is safe to enter into.
- The shed is not made for living but storing stuff.
- Please add some oil on the top and bottom door sliding channel to make door slides smoothly.

ASCOT 1 3 / 29



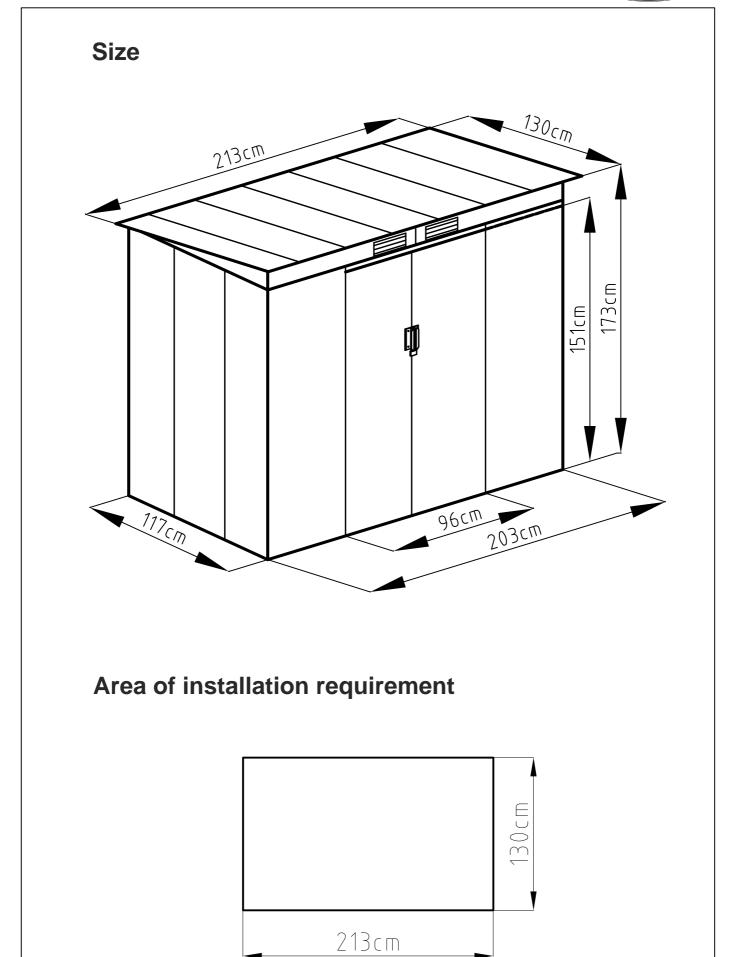

ASCOT 1 4 / 29

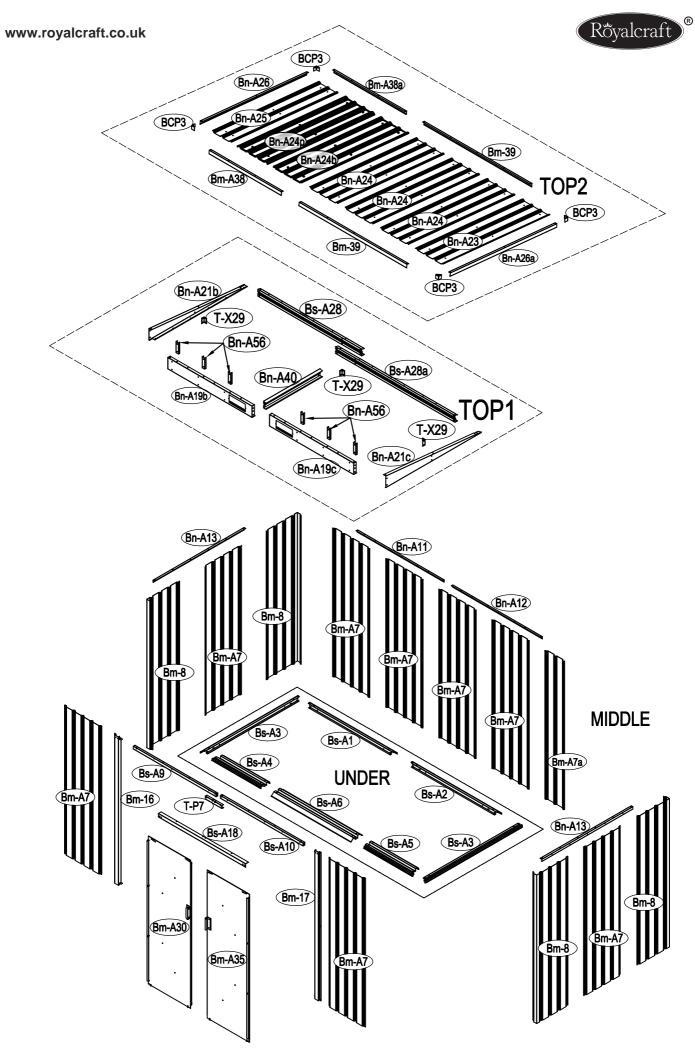


ASCOT 1 5 / 29





NO.	IMAGE	mm	QTY		
	UNDER				
Bs-A1		1055	x1		
Bs-A2	, ک	1074	x1		
Bs-A3		1174	x2		
Bs-A4	۲ ۲۲	590	x1		
Bs-A5		590	x1		
Bs-A6	2	958	x1		
	MIDDL	E			
Bm-A7	~~~	1548	x8		
Bm-A7a	~	1548	x1		
Bm-8	~~~,	1548	х4		
Bs-A9		995	x1		
Bs-A10		995	х1		
Bn-A11	ח	1040	x1		
Bn-A12	•	1077	x1		
Bn-A13	7	1096	x2		
Bm-16	Г	1548	х1		
Bm-17	7	1548	х1		
Bs-A18		1044	x1		
	TOP1				
Bn-A19b		1014	x1		
Bn-A19c	<u> </u>	1014	x1		
Bn-A21b		1150	x1		
Bn-A21c		1150	x1		
Bs-A28	7	1041	x1		
Bs-A28a	3	1196.5	x 1		
T-X29		56	х3		
Bn-A40	7	565	x1		
Bn-A56	j	116	х6		
TOP2					
Bn-A23		1289	x1		
Bn-A24		1289	х3		
Bn-A24b		1289	x1		
Bn-A25	~	1289	x1		
Bn-A24p	~~~	1289	x 1		

NO.	IMAGE	mm	QTY	
Bn-A26		1289	x1	
Bn-A26a		1289	x1	
Bm-A38		870	x1	
Bm-A38a	•	870	x1	
Bm-39		1296	x2	
DOOR				
Bm-A30		1543	x1	
Bm-A35	۰	1543	x1	
Bm-31	_	1483	x2	
Bm-A32		876	x4	
Bs-A33		486	x1	
Bs-A34	_	486	x1	
Bs-A36		486	x1	
Bs-A37		486	x1	
	ANNE	(
T-P1			x4	
T-P2			x4	
BCP3	命		x4	
TP5A			x2	
T-P6			x2	
T-P7		200	x1	
Bn-A50	0		x154	
Bn-A51	OPP	ST4x10	x162	
Bn-A52	Q ^m	ST4x16	x16	
Bn-A53	Of the second	M4x10	x97	
Bn-A54	8		x72	
	<i>Q</i>	40mm	x1	
	and the second		x2	
V-A1		1024	x 5	
V-A2	JL	512	x2	




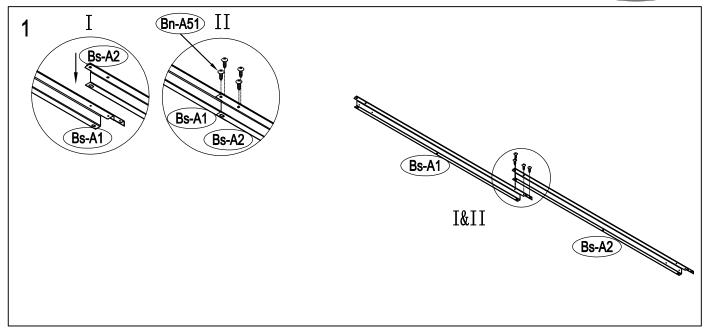


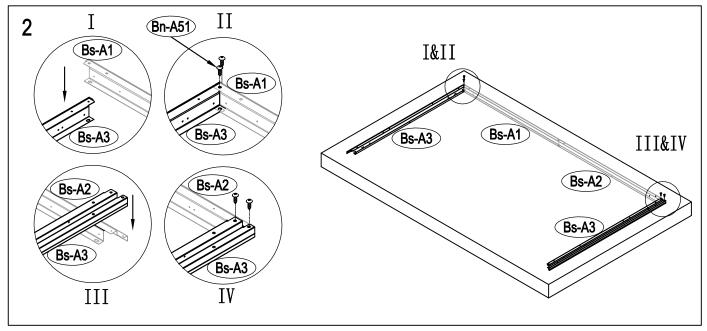


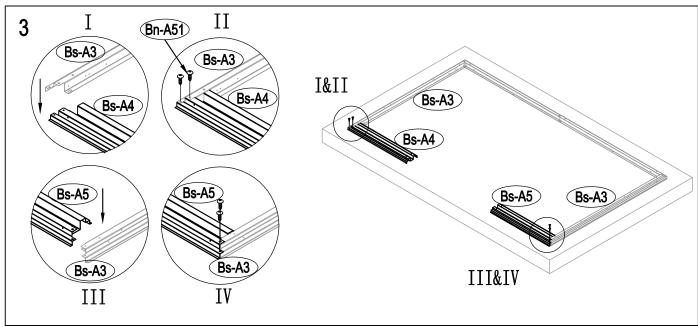




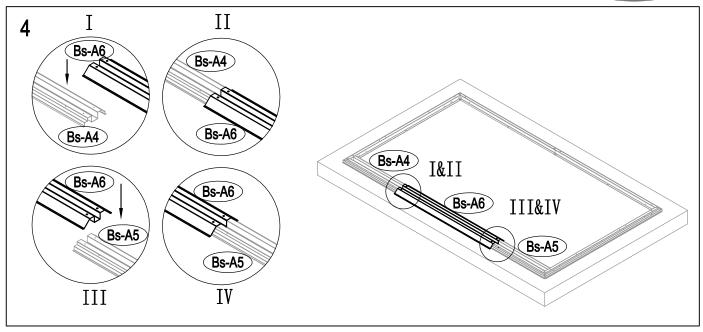


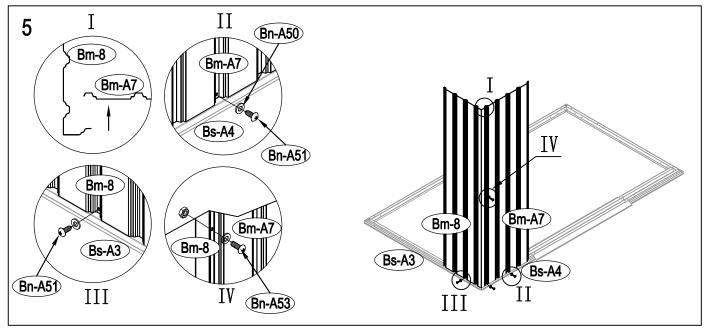


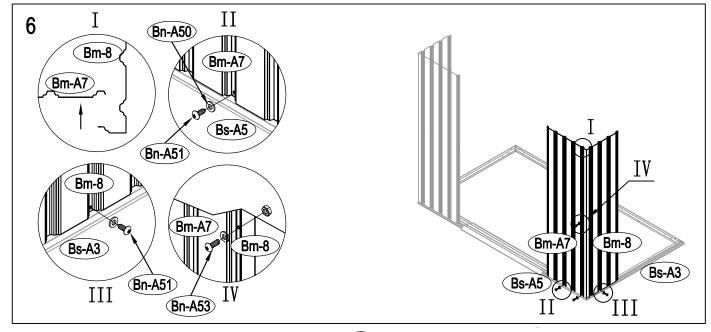




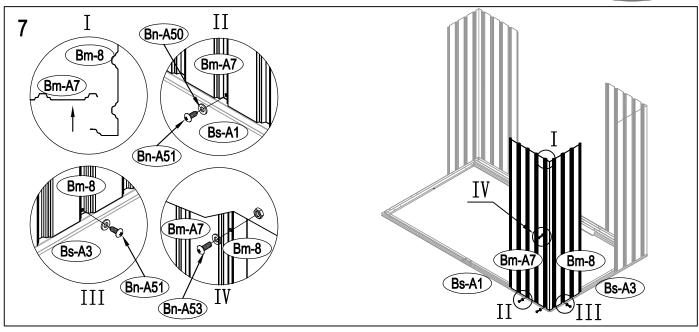


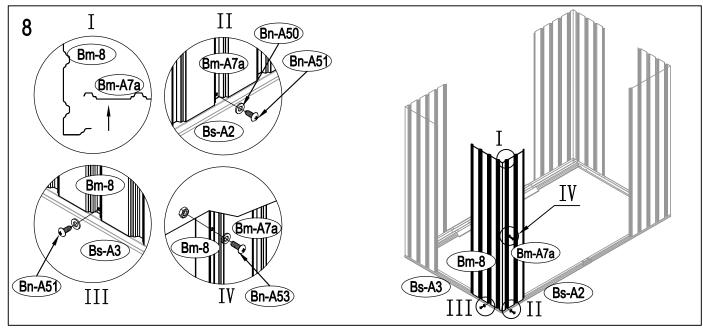


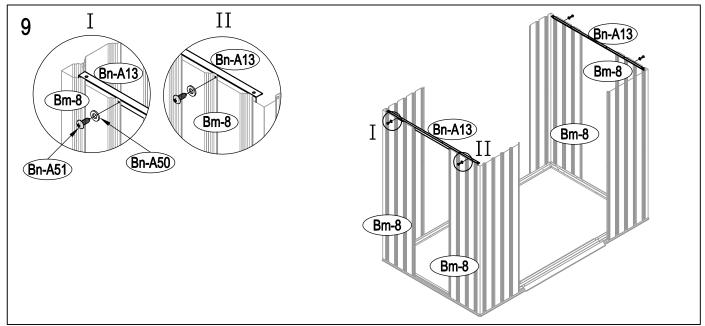




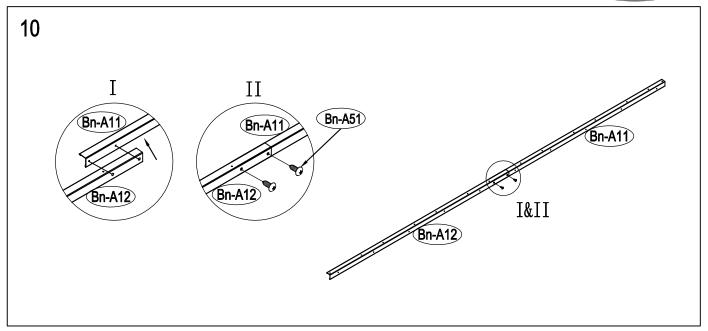


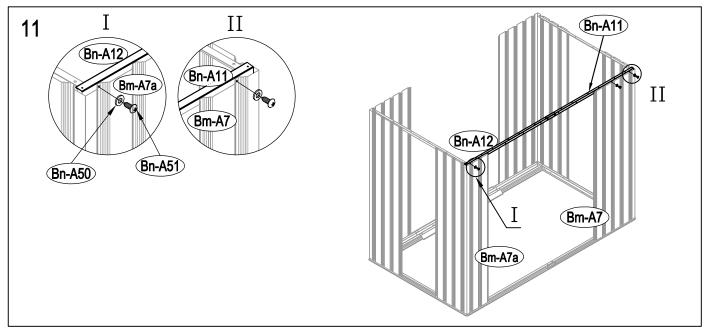


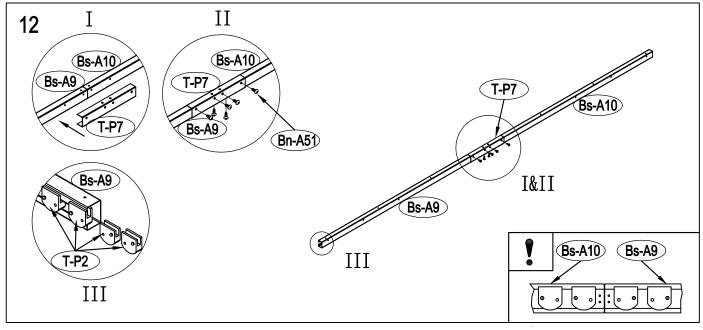




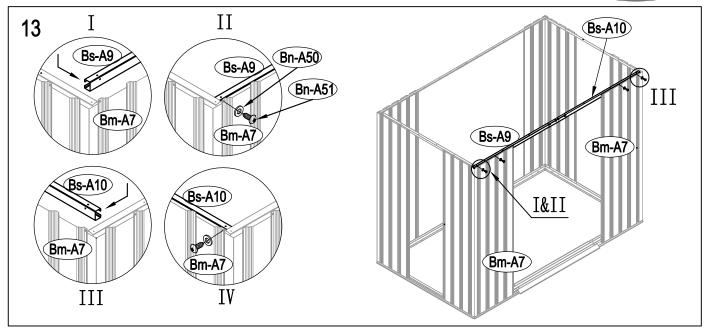


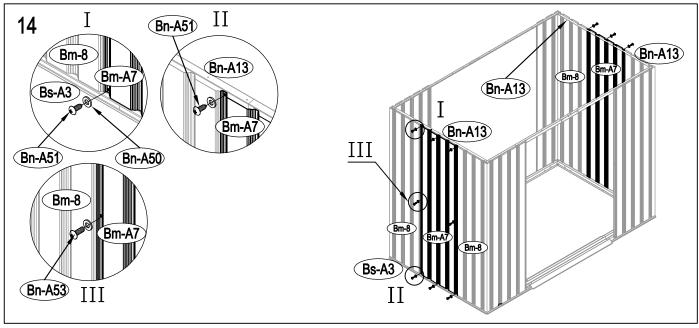


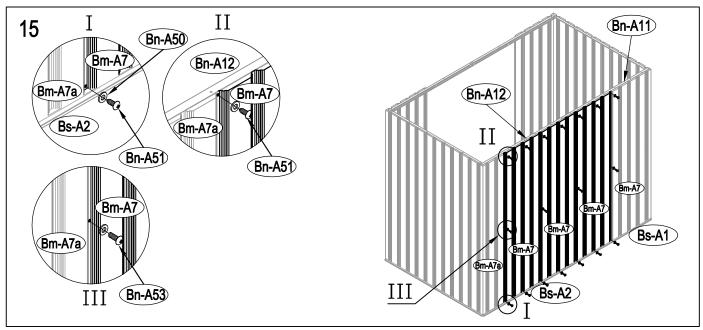




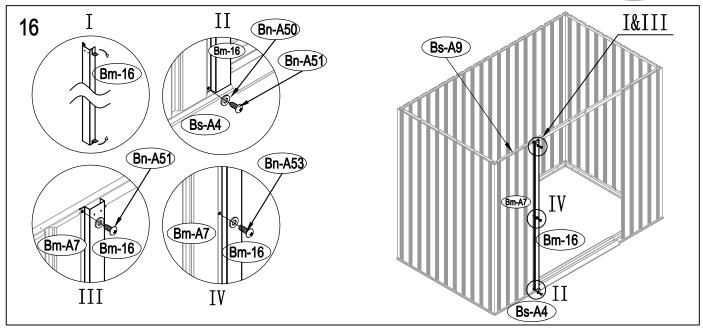


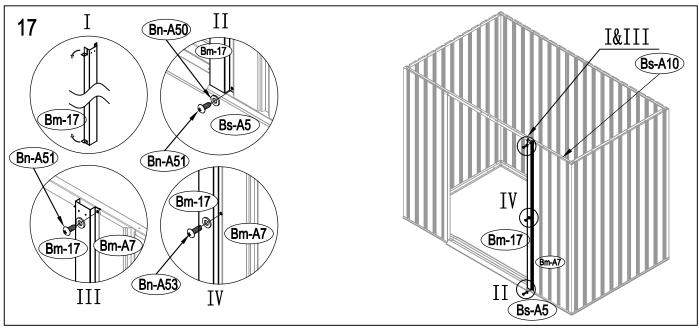


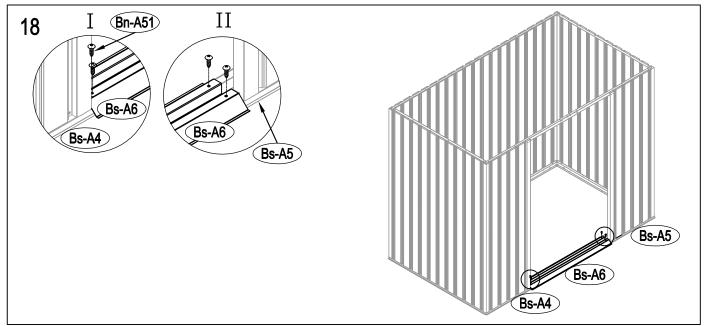




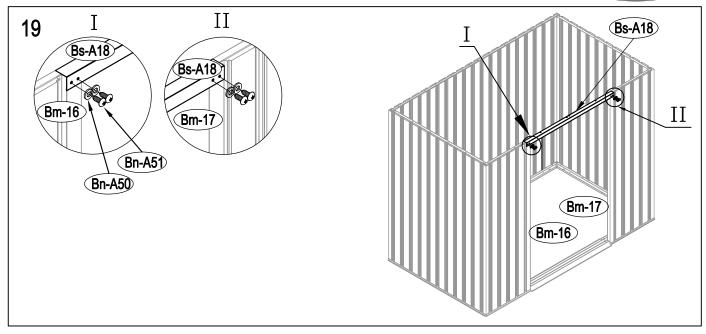


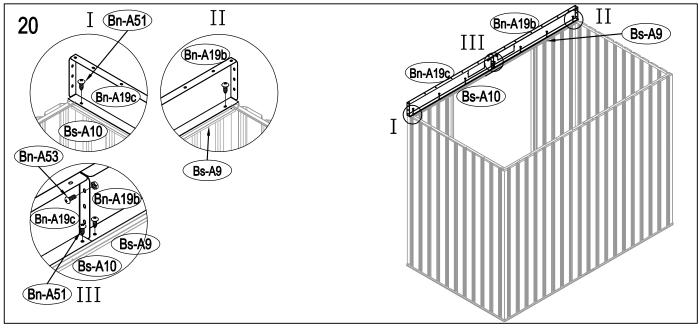


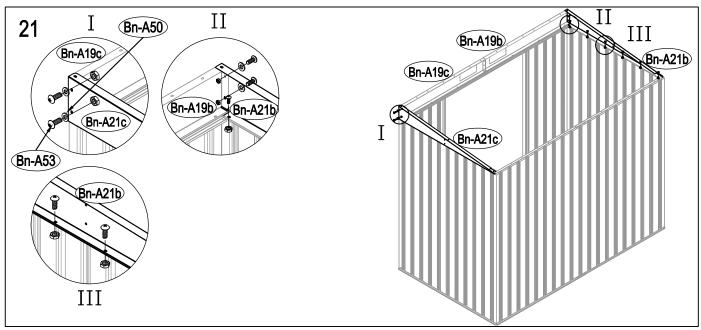




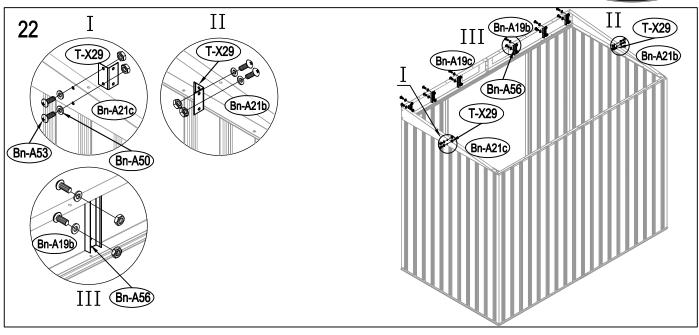


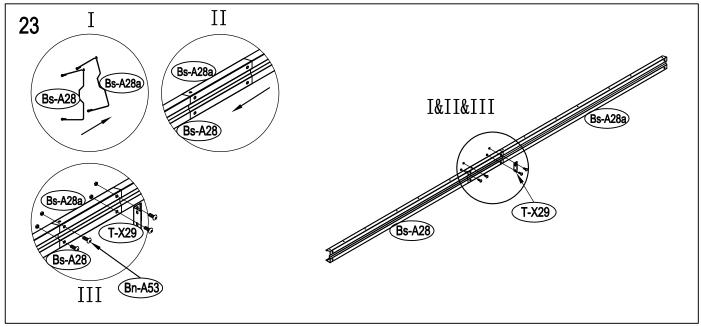


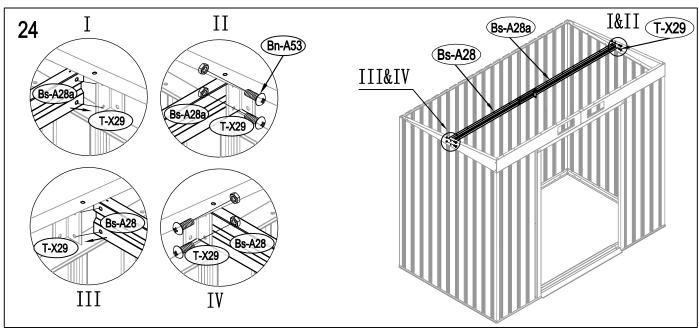




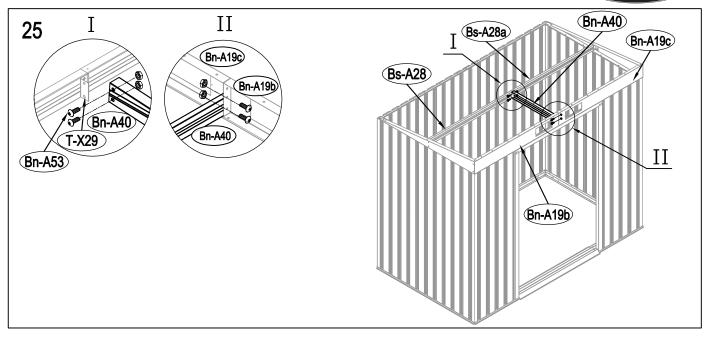


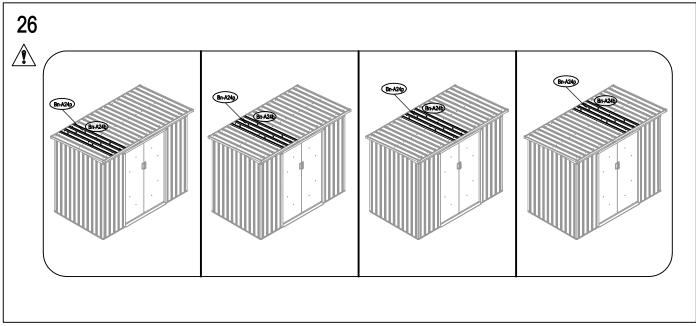


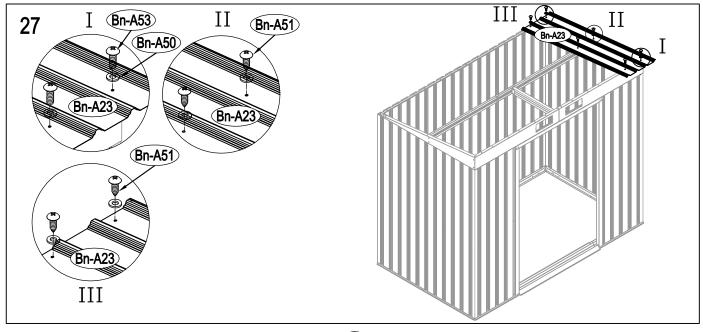




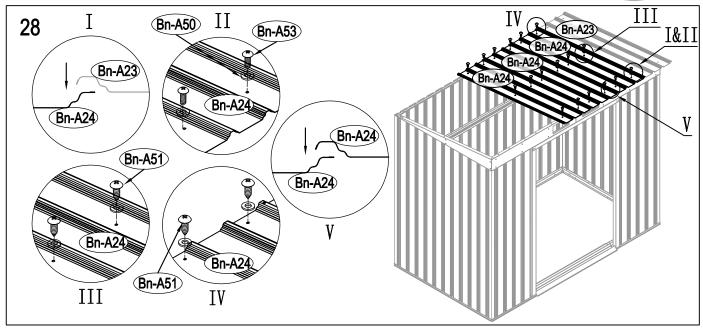


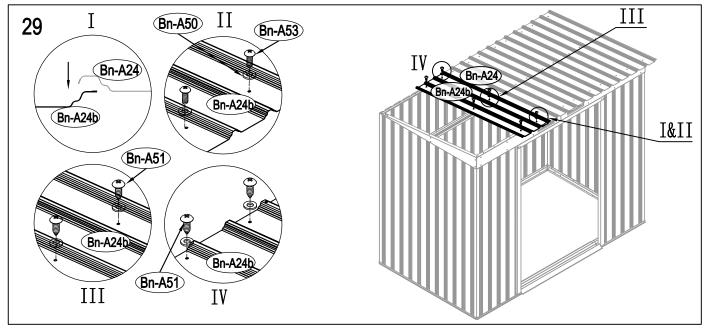


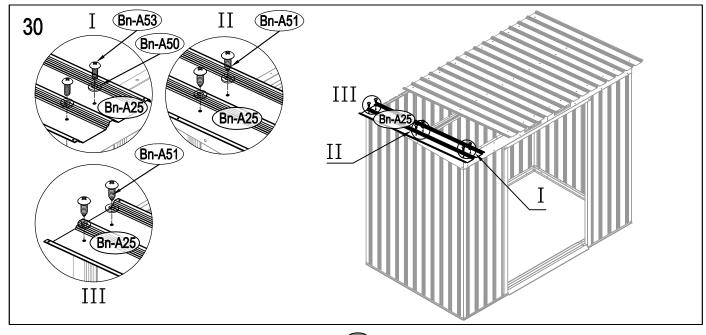




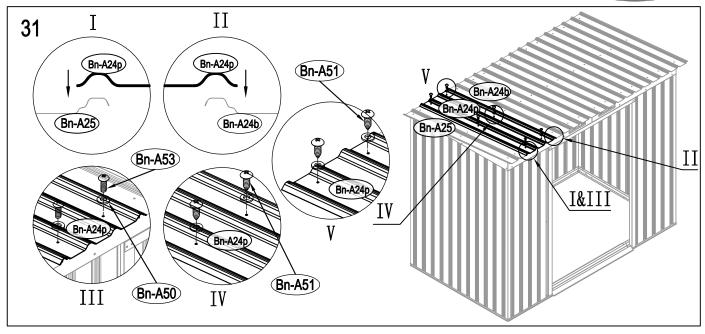


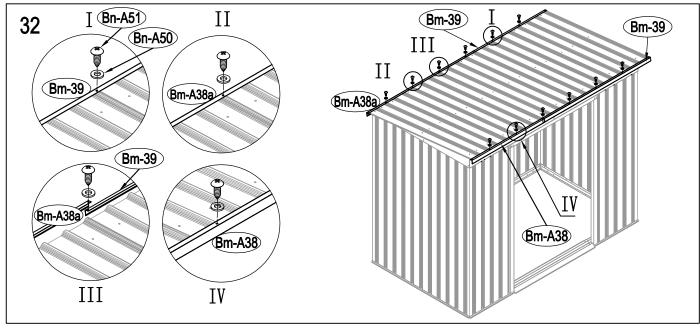


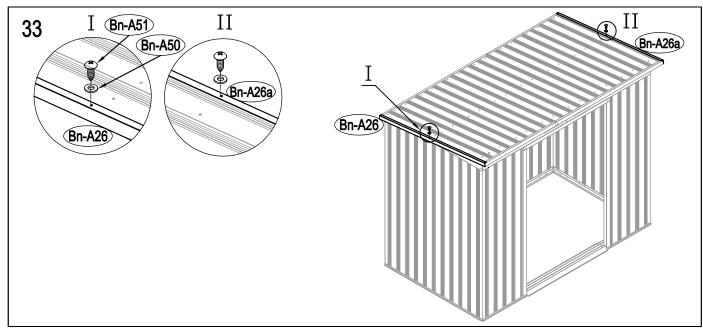




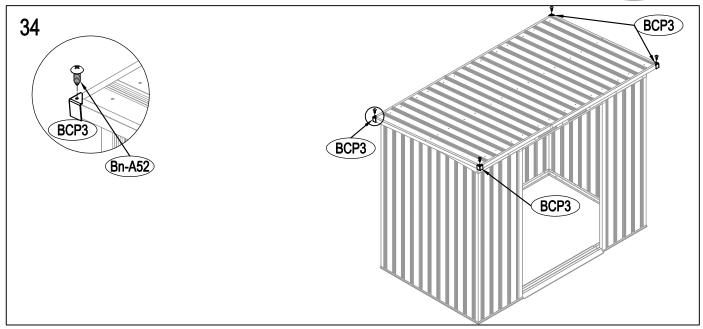

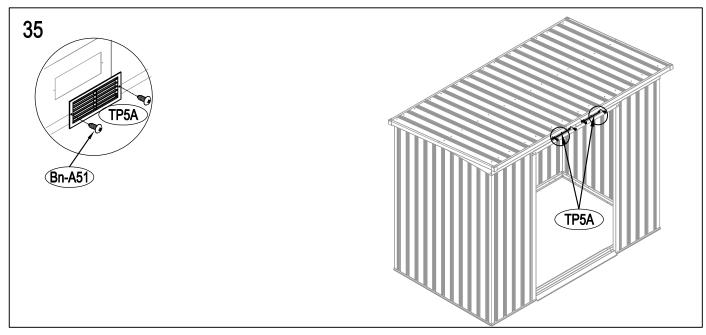


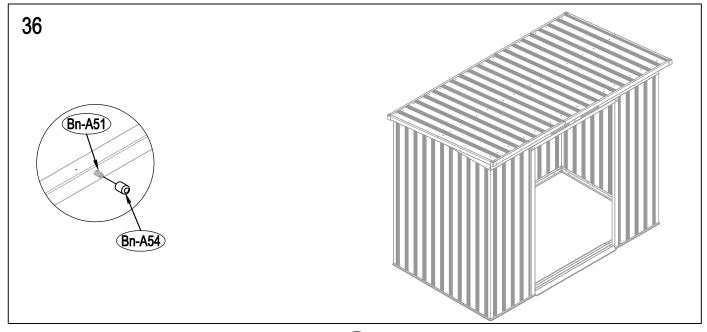




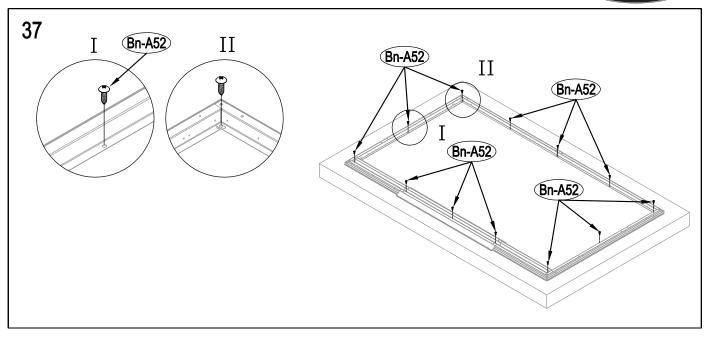





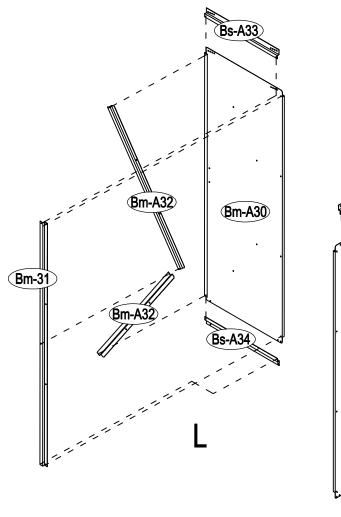


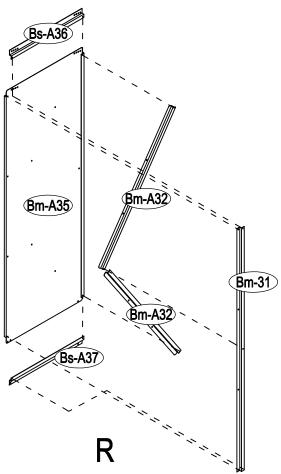




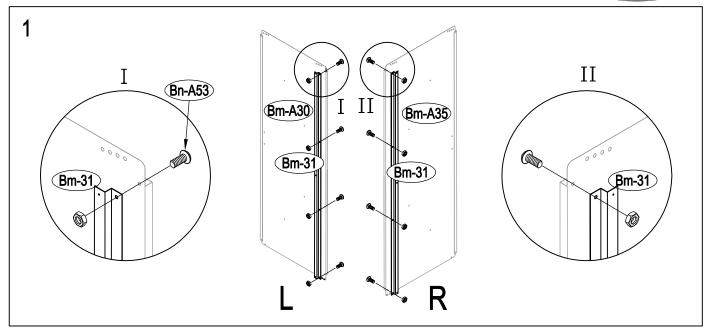


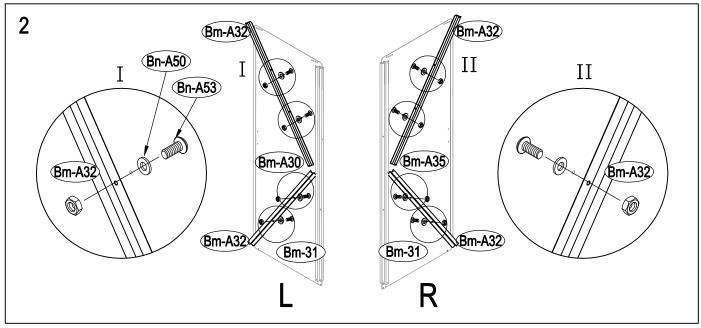


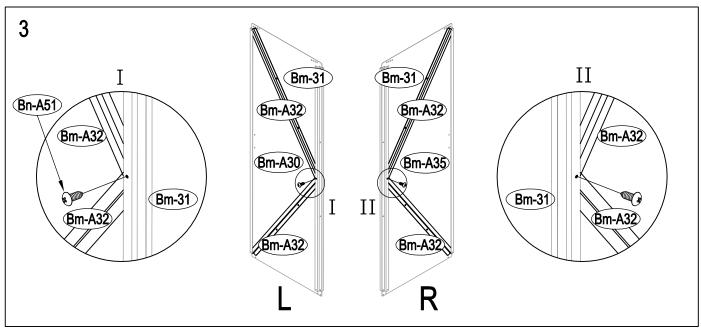




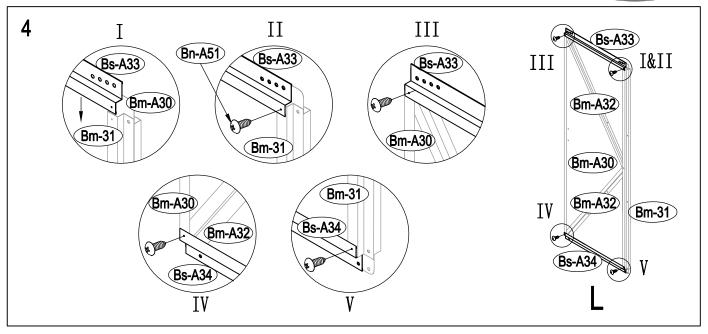


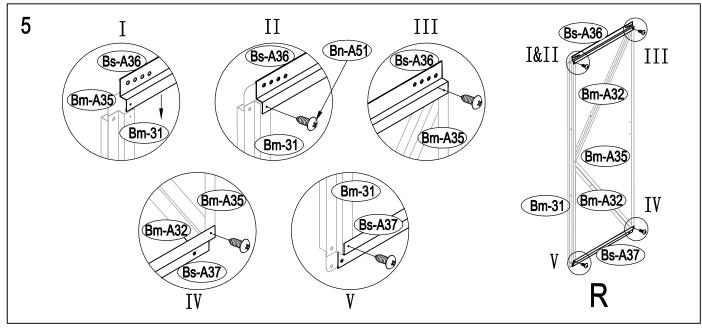


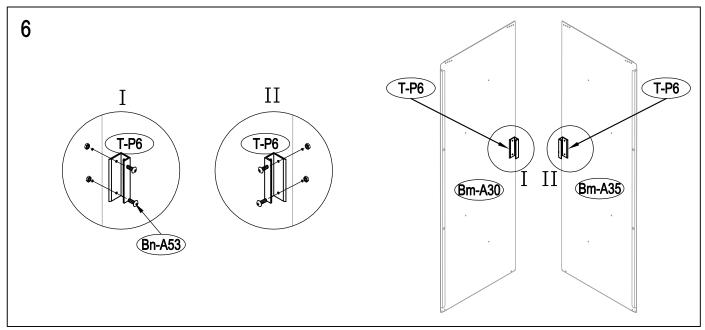




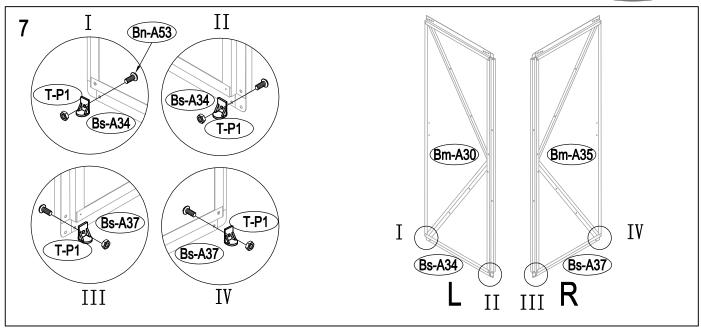

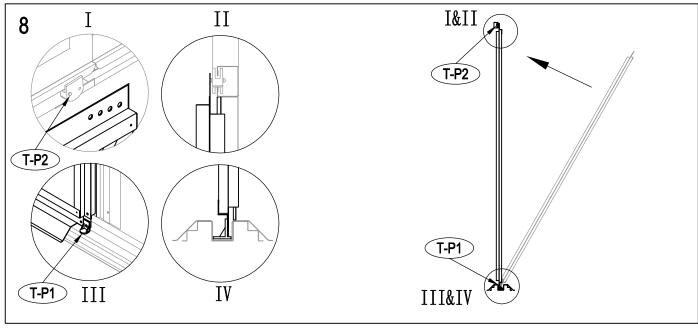

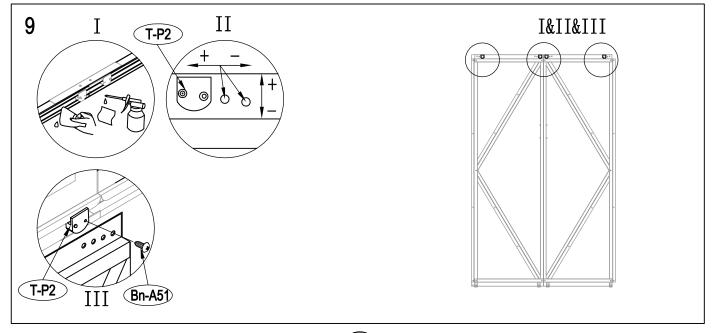



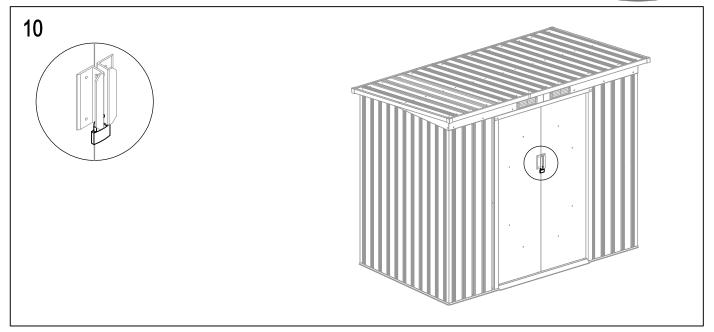



Foundation Kit Assembly Instructions


The foundation kit can be used as base for plywood, sand or stone.

PLEASE NOTE: Decking material and Self Drilling Screws for flooring are not supplied, the owner can buy them locally.


Before You Begin:


- SAFETY FIRST: Care must be taken when handling various pieces of your kit since some contain sharp edges. Please always wear work gloves (2 pairs of golves are provided with the shed for safe construction), eye protection and long sleeves when assembling or performing any maintenance on your kit.
- 2. GROUND MUST BE LEVEL! Be sure foundation kit frames lie flat on ground. To prepare the earth bed, remove sod and other organic debris, level the high spots with a flat shovel, and tamp the bed down.
- 3. DO NOT STEP ON CHANNELS until flooring material is in place!
- 4. Be sure all the parts fit together properly before proceeding.




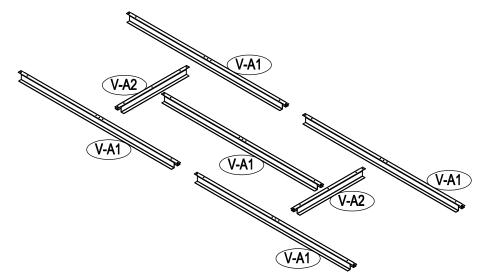




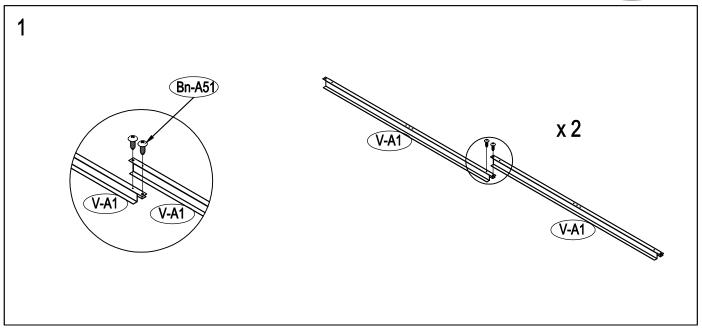

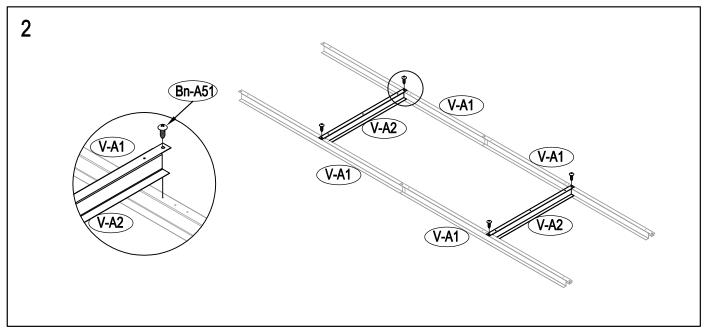

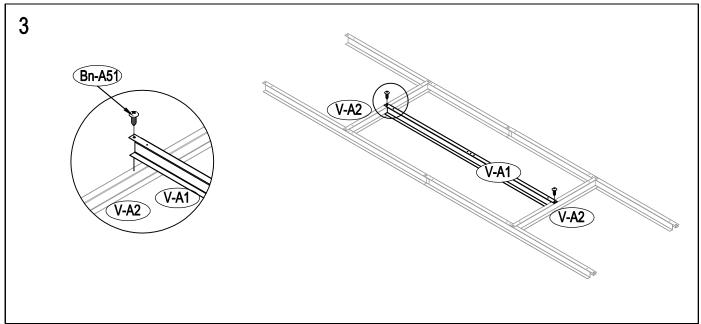



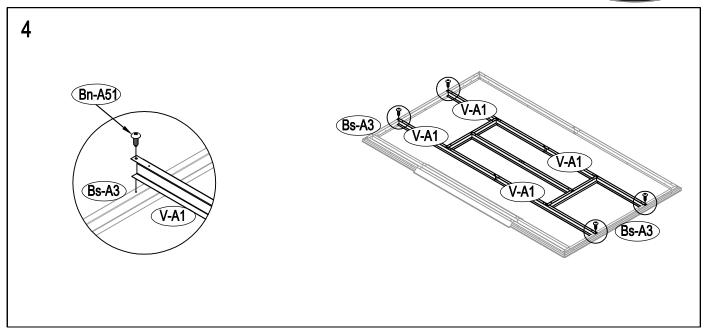



Plywood Flooring

NOTE: Decking material and self drilling screws for flooring are not supplied, the owner can buy them from local stores.

A) Plywood Flooring:


Recommended minimum thickness: 16mm (5/8"), **Exterior Grade.**

NOTE: Pressure Treated Lumber **must not** be used because it may cause corrosion when in contact with metal shed.


B) **25-35mm long self drilling screws** to secure Plywood Flooring.

Recommended dimensions for plywood flooring				
Image	mm	Qty		
	676x1090x16	2 pcs		
	639x1090x16	1 pc		
	st4.2x25~35	16 pcs		

Make sure the foundation kit frames are square and level .

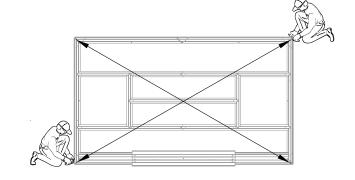

2. Cut Plywood to recommended dimensions.

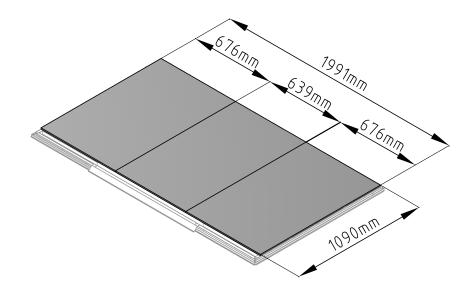



3. Fasten Plywood to foundation kit frames with self drilling screws .

