

Berkeley Arch

IMPORTANT: RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Always pre-drill timber to avoid splitting.
- The timber in this product is pressure treated to ensure longevity and protection against rot. This may leave colour variations, but these will even out as the moisture content stabilises.
- Timber is a natural material and will shrink and swell as a result of varying moisture content.
- Keep all plastic bags and parts away from children.
- This product is not intended for use by children. Do not climb.
- We recommend you anchor the legs in the ground or use post supports.

Technical Help line: 0333 7777 089 8:30am - 5.00pm Monday to Friday

In line with your statutory rights, please check all parts prior to assembly, as assembly of damaged parts may be deemed to be acceptance and this may affect the remedies you are entitled to. If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g. painted), the manufacturer cannot be held liable for any resulting damage.

Maintenance:
Regularly check that all fixings are tight and secure and the product has no protruding sharp edges or splinters.

This article contains biocidal products to give protection against wood destroying insects & wood rotting fungi. Contents may vary. May contain : Basic copper carbonate (Copper (II) carbonate – Copper (II) hydroxide (1:1), Cupric oxide, Copper hydroxide carbonate, oxyethyl, ammoniumpropionate, Copper HDO, Propiconazole, Tebuconazole, Boric acid, Benzalkonium chloride. Wear gloves when handling freshly treated wood. Avoid breathing dust when cutting treated or untreated wood. Dispose of off-cuts responsibly – do not burn.

Important: Assembly of this Arbour requires two adults



REQUIRED TOOLS : (NOT SUPPLIED)



TAPE MEASURE



HAMMER




DRILL






POZI DRIVE SCREWDRIVER


PARTS:

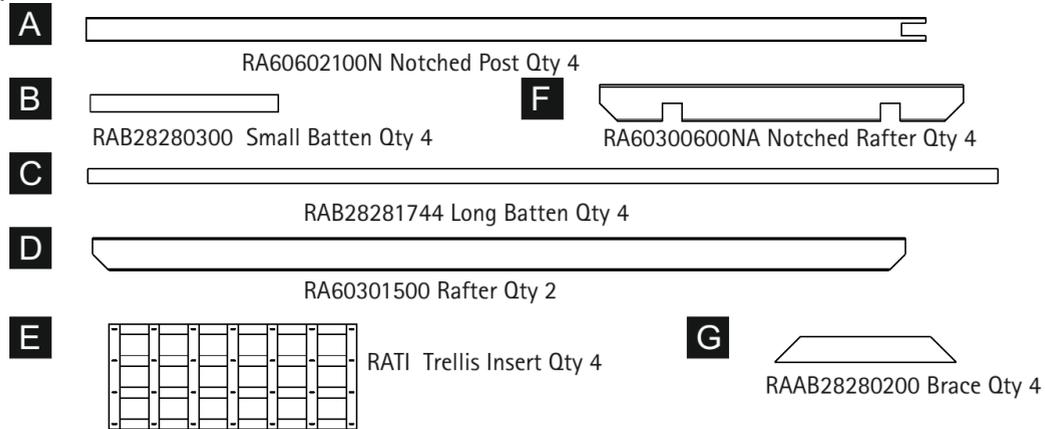


(FIXING PACK) BKAFF



NOT TO SCALE

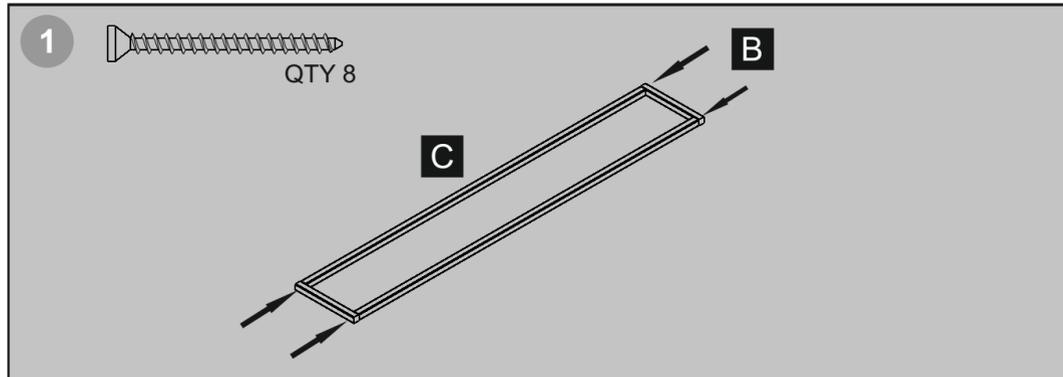


Fix two small battens to the ends of two of the larger battens using 2x40mm screws for each.

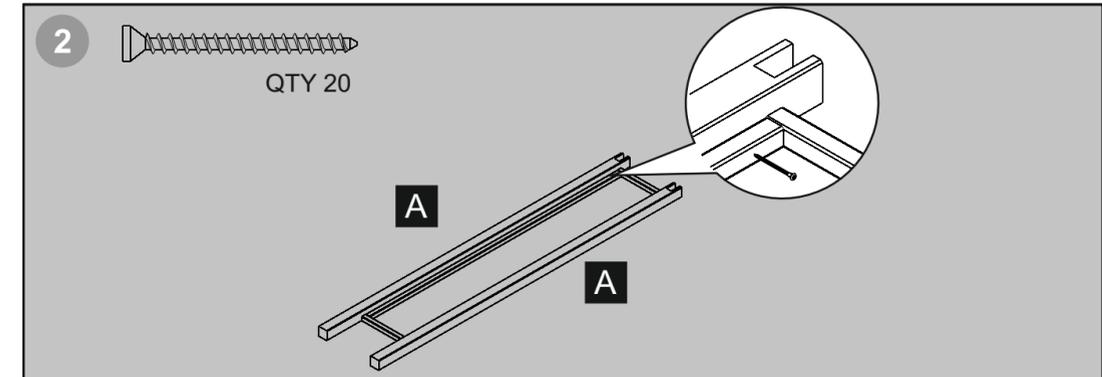


Place the frame, you have previously completed, between two of the posts. Make sure the top of the frame is in line with the notch.

Fix the frame to the posts using 5x40mm screws for each post.

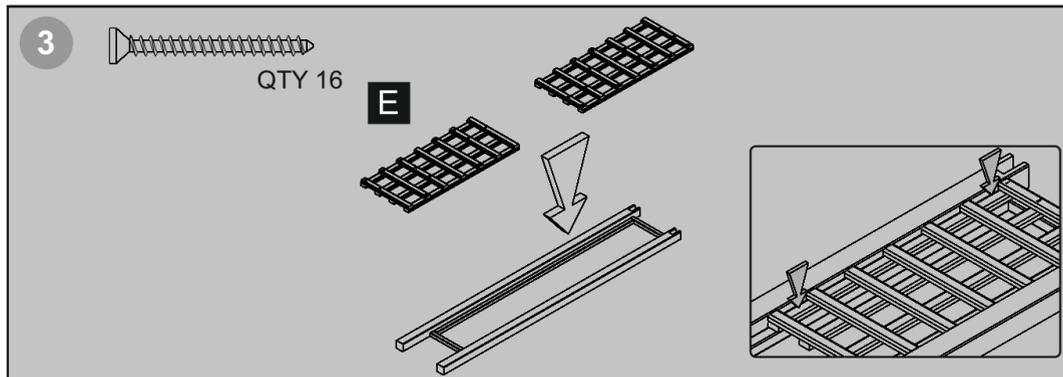

Place the trellis inserts at the top and bottom of the frame making sure they are flush.


Fix each in place using 2x35mm screws for each side., Screwing through the insert into the frame.

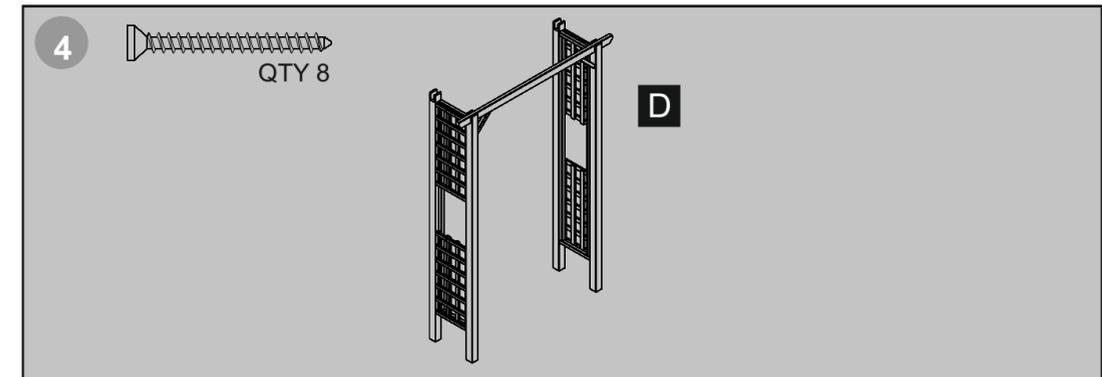

Place the large rafters between the two sides making sure there is equal overhang on both sides.


Fix in place using 2x35mm screws for each post. One from each side of the post.

HINT: Assemble the Arch on it's side before standing.

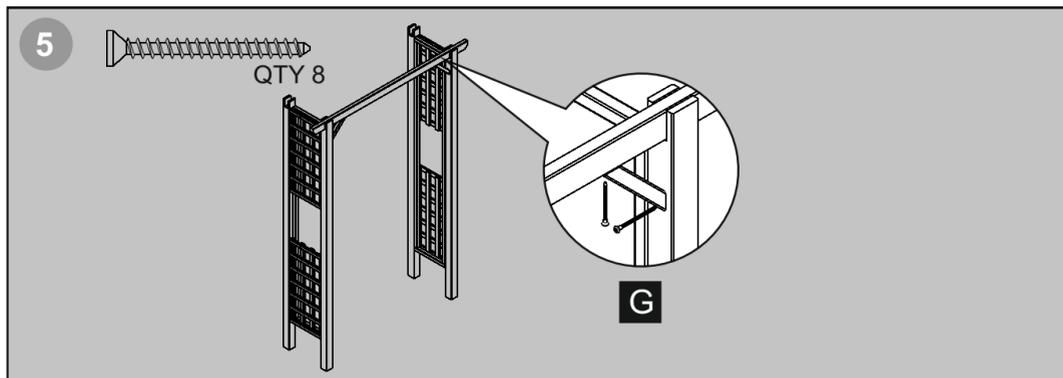

Place the brace so that it is tight with the post and the large rafter.

Fix in place using 2x35mm screws screwing through the brace at an angle.

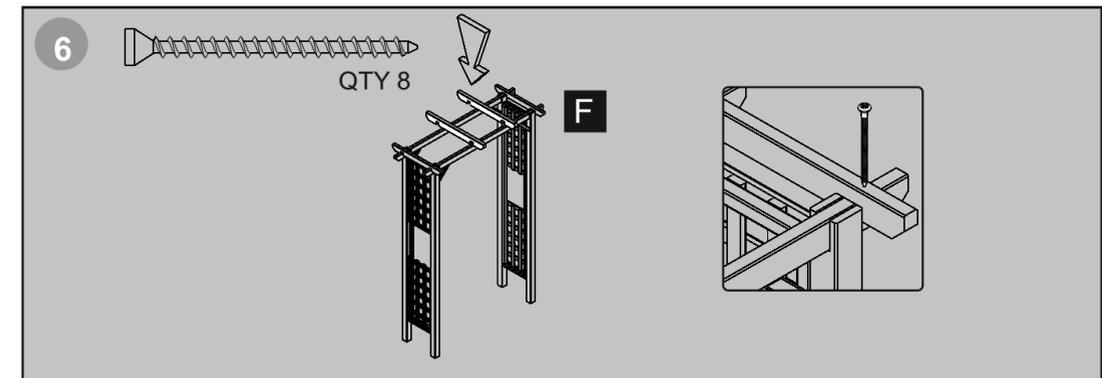

Place the small notched rafters as shown so that they are spaced evenly.

Fix each in place using 2x50mm screws for each.