


DOUBLE BIN STORE ASSEMBLY INSTRUCTIONS

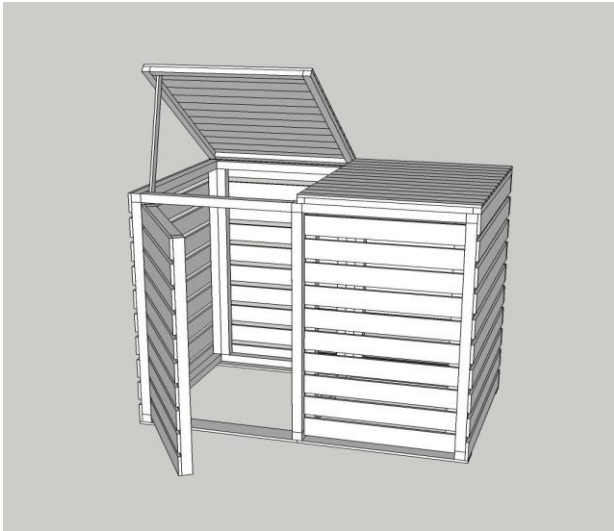

Please ensure that you check all component parts for quantity and quality before you commence building the product.


If there are any missing parts, please contact the sales company immediately.

Timber is a natural product. It will shrink and swell with changes in moisture content.

This product has been pressure treated to ensure protection against all weather conditions. Annual cleaning and re-treatment with a timber preservative will help prolong the life of the product.

A powerdrill/screwdriver plus tape measure will be required to assemble this product.

Components supplied:

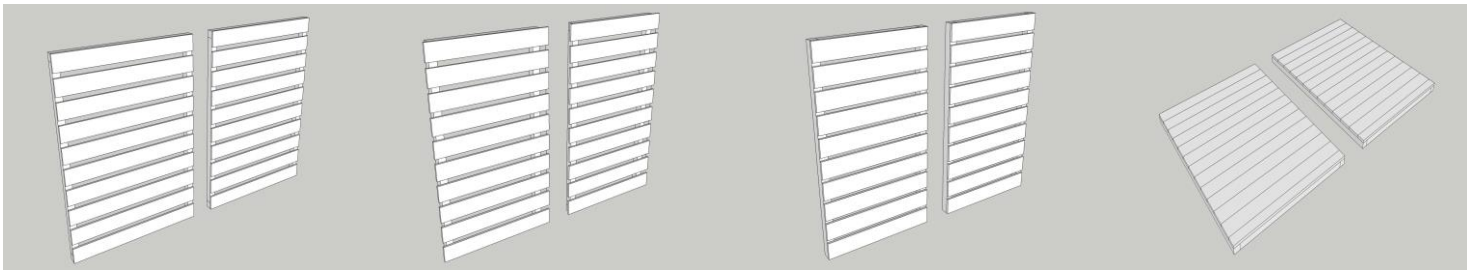


2 x Side panels

2 x Back panels

2 x Doors

2 x Lids

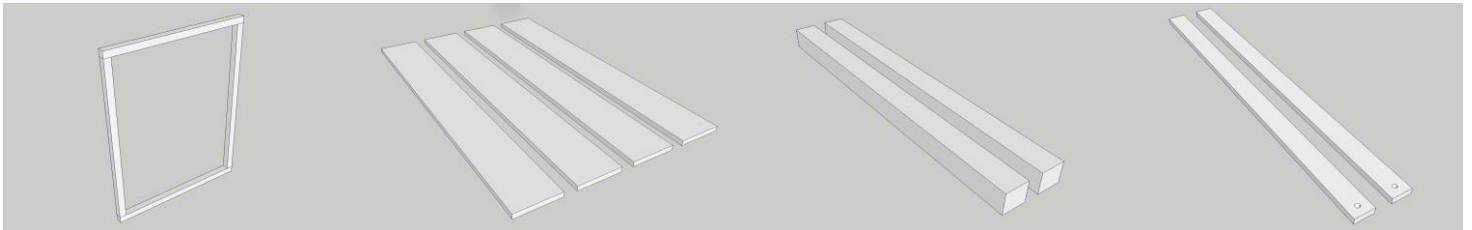

1 x Middle frame

4 x Bottom support

2 x Frame support

2 x Lid pole


Fasteners supplied:

8 x 70 mm screws

64 x 35 mm screws



2 x barrel bolts

A 'GARDEN TECHNOLOGY' PRODUCT FROM ESTONIA
TIMBER SUPPLIED FROM SUSTAINABLE FOREST RESOURCES

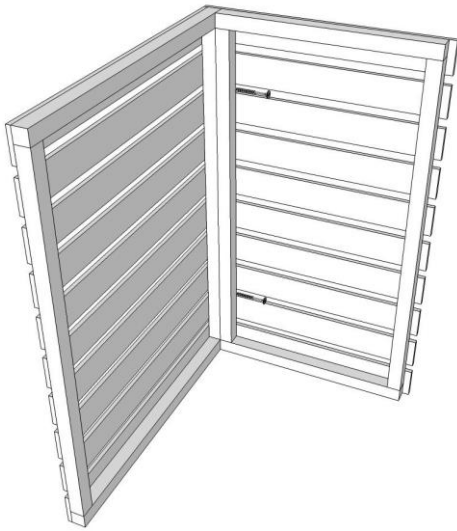



Stage 1. Place one side panel and one back panel as shown in the image and ensure that the upper and lower edges are on the same level. Follow the same guideline with all other panels. Use 2 x 70mm screws to fasten the panels from the inside.

Stage 2. Place the middle frame at the right edge of the back panel and fasten from the left with 2 x 70mm screws.

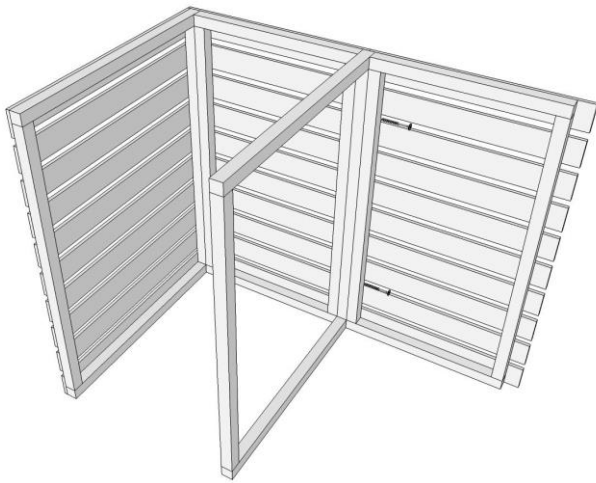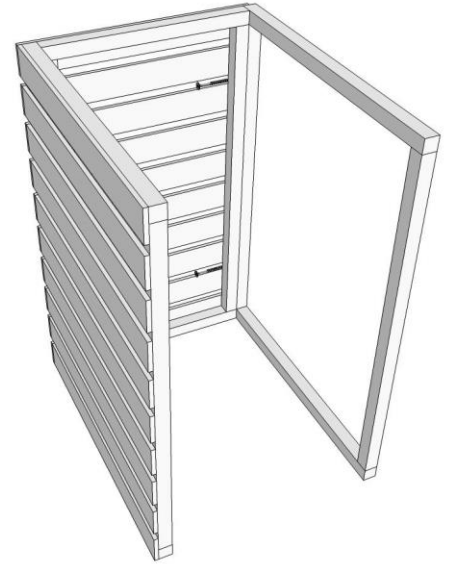


Stage 3. Place the right side back panel as shown in the drawing and fasten from the left side with 2 x 70mm screws.


Stage 4. Place the right side side panel as shown in the drawing and fasten from the interior side with 2 x 70mm screws.

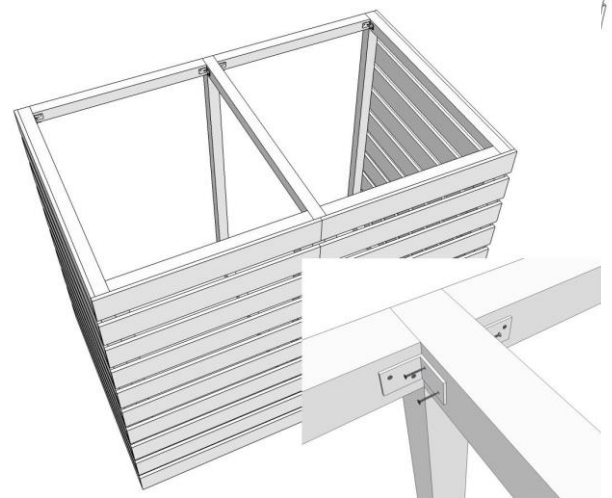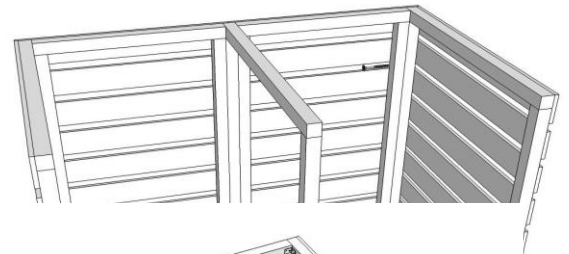


Stage 5. Add to the front side upper edge horizontal frame supports and fasten them with 8 x 35mm screws through the metal corners.

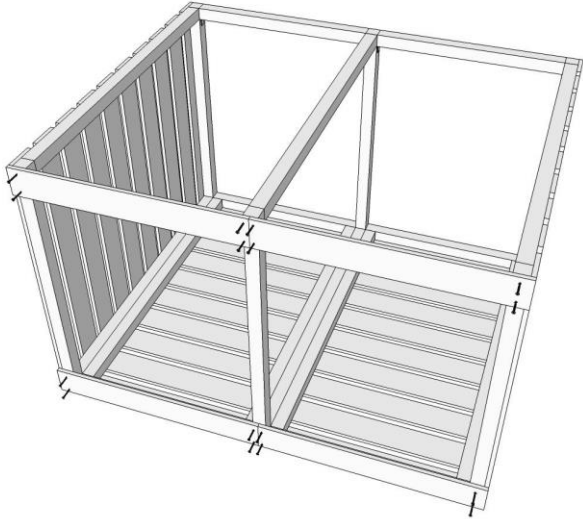

Stage 6. Rotate the bin store to the rear side and fasten the 4 bottom supports as shown using 16 x 35mm screws.

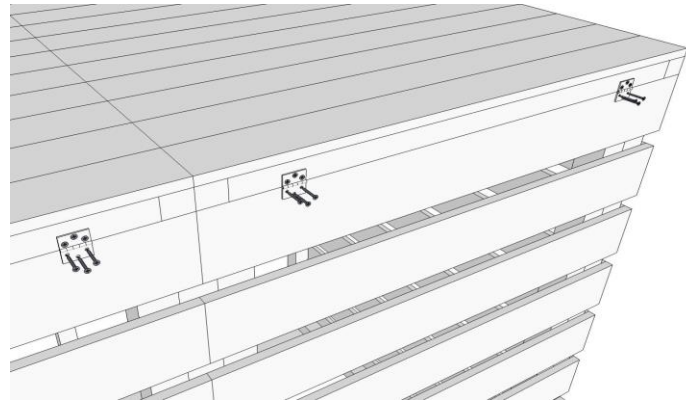

Stage 7. With the right side up fasten the two lids from the rear side with 4 hinges and 12 x 35mm screws.

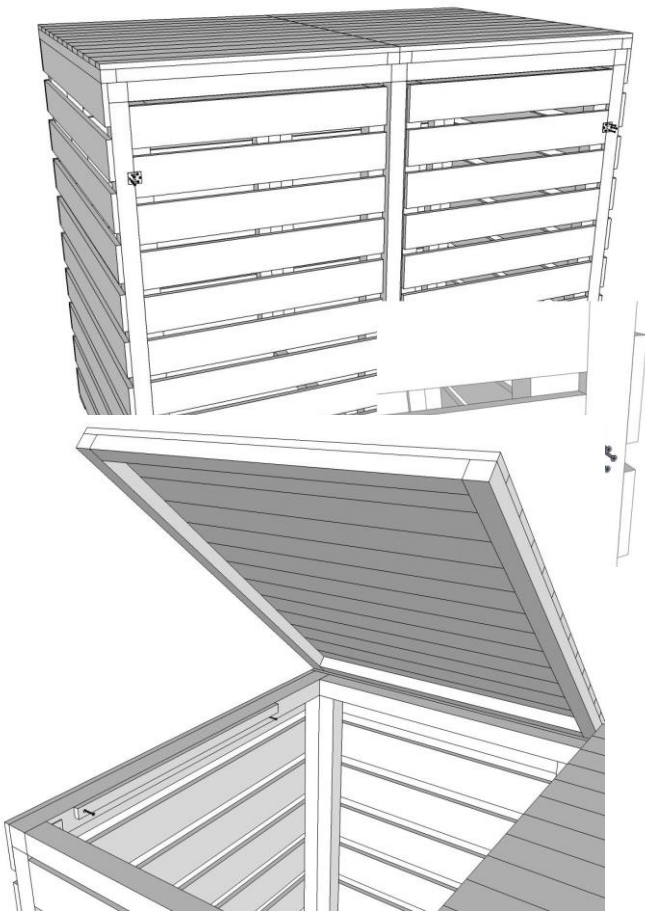

Stage 8. From the front side, fasten the doors such that there is a gap of approx. 10 mm between the doors and the upper edge. Use 12 x 35 mm for installing the 4 hinges.

Stage 9. Lift up the left side lid and using 1 x 35mm screw attach the lid pole to the left edge. Add a supporting screw to the lower back edge of the pole. Repeat the procedure with the right side lid.

Stage 10. Finally attach to the front side of the door barrel bolts using 12 x 35mm screws.

