Assembly Instructions

(W x D x H) 1.8m x 0.725m x 0.80/0.875m
Product Name: Log Chest

Pressure Treated products should not be treated with any other products for the first month.

PLEASE KEEP THESE INSTRUCTIONS

Zest4Leisure
01352 752555 option 1 – sales@zest4leisure.co.uk

Log Chest Assembly Instructions

Requires 2 person assembly.

Tools required: Corded / Cordless Drill, Pozi-drive Bit / Screwdriver, (Hex Bit Included).

Log Chest Pack List		
Item	**Description**	**Quantity**
A	Side Wall Panel	2
B	Back Wall Panel	1
C	Front Wall Panel	1
D	Base Panel	1
E	Top Panel	1

Fixings		
	60mm screws	20
	30mm screws	14
	T Hinges	2

Log Chest should be positioned on a level base to ensure that the top/hinged panel operates correctly

1. Locate 8no 60mm screws into the pre drilled holes on the framing of Side Panels (A) and 2no 60mm screws into the base framing on Back Panel (B) and Front Panel (C), as shown in Diagram 1. Secure Side Panels (A) to Back Panel (B) using a posidrive #2 screwdriver. The cladding on the side panel should overlap the ends of the cladding on the rear panel, and the base timbers of the panels should be level.
2. Repeat procedure for attaching Front Panel (C), ensuring the cladding on the side panels overlap the ends of the cladding on the front panel, and the base timbers of the panels should be level.
3. Locate the wall panel assembly onto Base Panel (D), ensuring the wall panels are flush with the perimeter of the base panel. Secure the wall panel assembly down to the base panel using 8no 60mm screws.
4. Prior to attaching the hinges, please ensure that the Top Panel (E) is orientated as shown in Diagram 2. Position the hinges on the two innermost framing timbers on the underside of Top Panel (E) as shown in Diagram 1. The hinge pin (i.e. the pivot point of the hinge) should be positioned 38mm in from the rear outer edge of the top panel (See Diagram 3). Attach using 4no 30mm Screws per hinge (See Diagram 1). Position Top Panel (E) onto the assembly and, ensuring the overhangs are equal, attach the hinged top panel (E) to the outer face of the Back Wall Panel (B) using 6no 30mm screws i.e. 3no screws per hinge (See Diagram 3).

Diagram 1

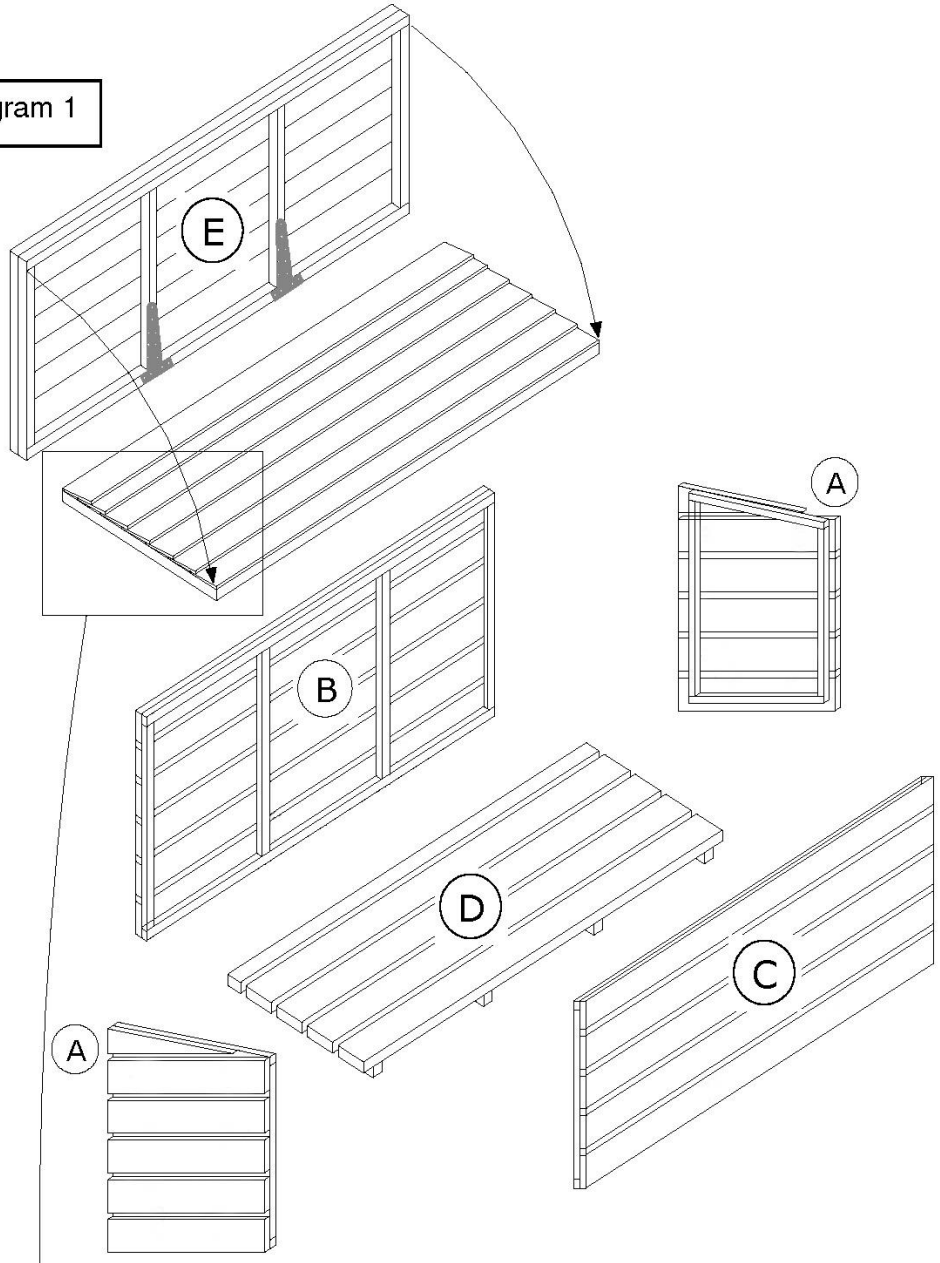

Diagram 2

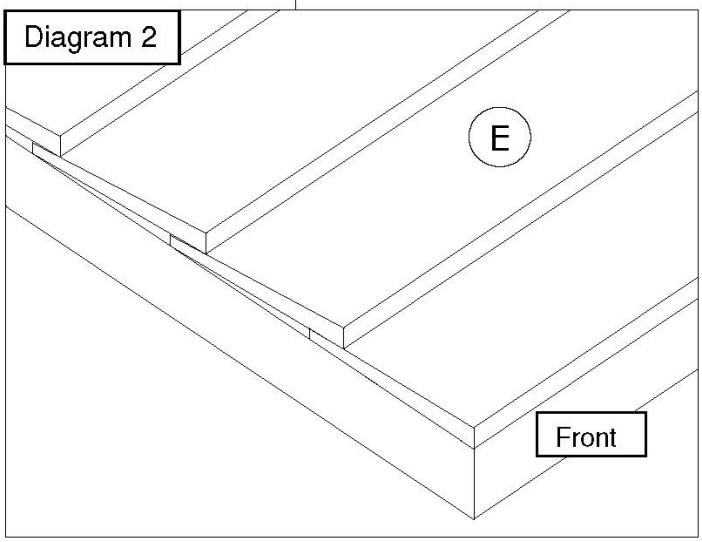

Diagram 3

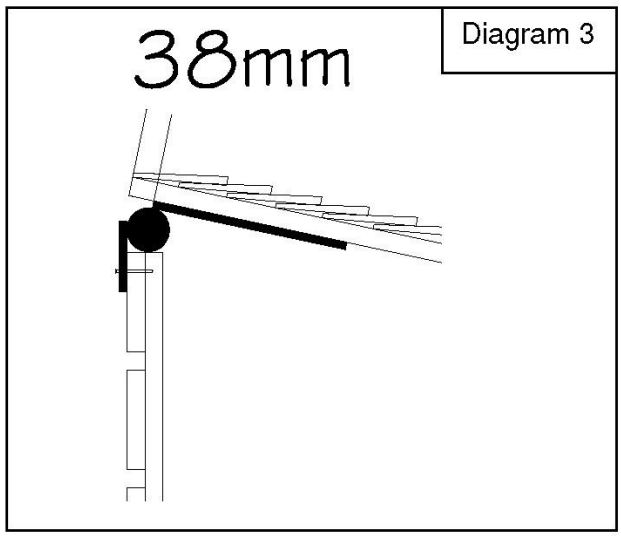

Log Chest is now complete.