

PERGOLA CANOPY

INSTRUCTIONS (3.6mx3.6m)

**IMPORTANT**

Assembly requires 2+ adults.

**REMINDER**

Always pre-drill before screwing.

Missing something or need more information?

Call our aftersales team on
0333 321 3142

Visit our website for spare instructions and more information

www.forestgarden.co.uk

TOOLS NEEDED


We recommend using the following tools (not supplied):



Drill & 2-3mm
Drill Bits



Tape Measure

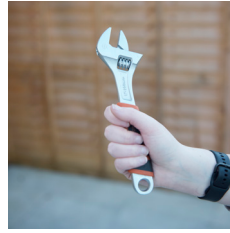

Spanner




Ladder

KIT CONTAINS (UPK02CKP)

CHECK YOU HAVE ALL OF THE KIT PRIOR TO ASSEMBLY.

Assembly of damaged parts may be deemed to be acceptance and this may affect the remedies you are entitled to. If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g. additional sewing), the manufacturer cannot be held liable for any resulting damage.

Please lift with caution and with a minimum of 2 people.

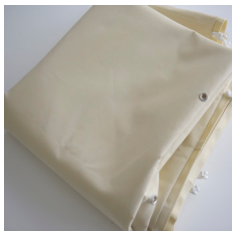

Canvas
Qty 1



Large Roller
Qty 2



Small Roller
Qty 4



Plastic Cleat
Qty 2



Large Rope
Qty 2



Small Rope
Qty 2



35mm Screws
Qty 30



40mm Screws
Qty 24



Hook Receiver
Qty 6



Wires With Bottle
Screws
Qty 3



Pole Sections
Qty 1 Each

**PLEASE KEEP PLASTIC BAGS, SMALL PARTS, COMPONENTS AND ROPE AWAY FROM CHILDREN
CHECK AND TIGHTEN ALL THE FIXINGS APPLIED TO THIS PRODUCT ON A REGULAR BASIS.**

HEALTH & SAFETY


THE ROOF OF THIS PERGOLA & CANOPY IS NOT A LOAD BEARING STRUCTURE

We strongly recommend that PPE (Personal Protective Equipment) is used throughout your build to ensure you are protected from any potential health and safety risks. **Do not exempt yourself from wearing PPE.**





Position and secure 1 x Hook Receiver to each corner of the slotted rafters, approximately 20mm away from the upright posts. Ensure the Hook Receiver is near to the bottom of the rafter, as shown above.

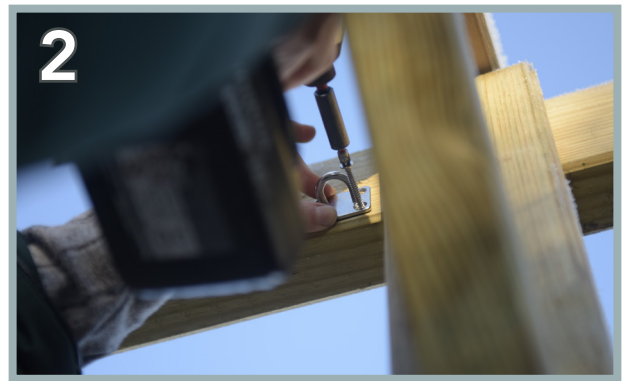


Once positioned, secure each Hook Receiver using 4 x 40mm screws.



Position 1 x Hook Receiver in the centre of the front slotted rafter. Ensure it is central and positioned towards the rafter above. Repeat the process on the back slotted rafter.




Once positioned, secure them using 4 x 40mm screws.

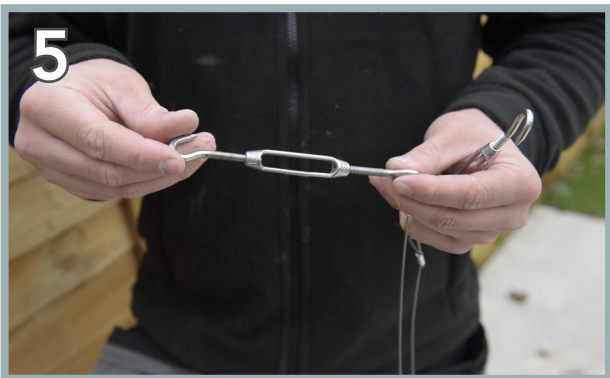


Unscrew all of the Bottle Screws of which are at the ends of each Wire supplied, as shown above.



Using the Bottle Screws, hook the Wires to the Hook Receivers. Ensure you hook the Wires to the adjacent Hook Receivers, and not to the Receivers on the same rafter.

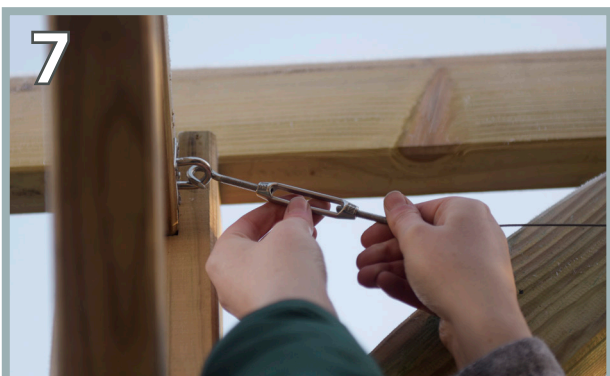

Tighten the Wires using the middle section of each Bottle Screw. If necessary, use a spanner to ensure the Wires are properly taut, as shown above.

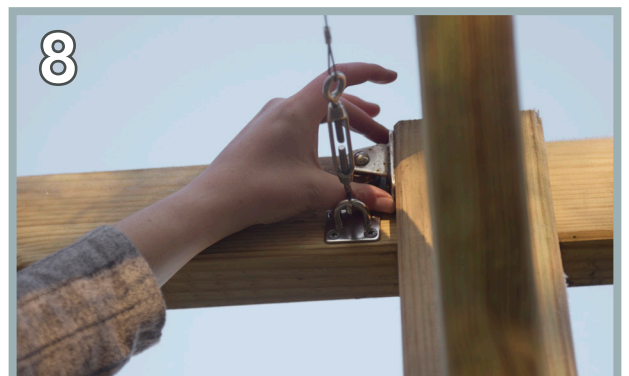

Position and secure 1 x Large Roller on the side of the pergola, above the Hook Receiver. Use 2 x 40mm screws for each. Repeat the process on the other post, where the other end of the Wire finishes.



Position 1 x Small Roller centrally under the first rafter inwards from each upright post. Secure using 2 x 35mm screws each.



Once secured, take 1 x Long Rope and thread one end through the Small Roller furthest away from Large Roller. If necessary use a finger to feed the rope through the Roller.



Ensure the Long Rope goes over the top of the middle Wire, as shown above.




Thread the Long Rope through the top of the Large Roller and pull it through the bottom. Ensure the other end of the rope does not leave the Small Roller.



Repeat the process for the front and back of the Pergola. Ensure it looks like the above.



Using the 1 x Small Rope, thread one end through the Small Roller closest to the Large Roller on the front of the pergola. Repeat this on the back.

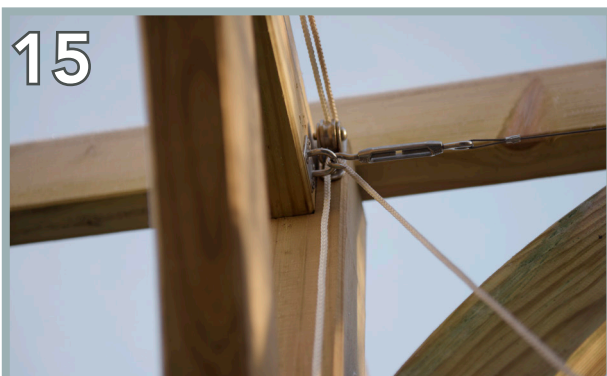

Thread the Small Rope through the top of the Large Roller and pull it through the bottom. Ensure the other end of the rope does not leave the Small Roller.



Using the two ends of the ropes that have been threaded through the Large Roller, tie them in a knot as shown above.



The front of the Canvas has 2 x rounded cutouts and the back has eyelets for screwing into the rafter. For reference, see the above.



The Canvas has plastic clips along its edges and in the centre. Ensure the clips in the middle are on the top side of the Canvas.



Take the plastic clips from the middle of the Canvas and start from the back. Place the clip around the middle Wire and twist it to hook it on.



The plastic clip when secured will look like the above.



Fold out the Canvas and hook the remaining clips along the middle Wire.



All of the plastic clips will be hooked onto the middle Wire as shown above.



Repeat the process for all of the remaining plastic clips on both edges of the Canvas, as show above.



The Pole Sections for this canopy comes in 2 parts. They will need to be connected together when inside the Canvas.



25 Using the Pole Section with the metal end, slide it through one of the cutouts. Ensure the metal end is facing towards the middle of the Canvas.



26 Once inserted, slide the Pole Section back to the sealed edge of the Canvas.




27 Your first Pole Section will look like the above.



28 Using the other Pole Section, insert it into the small hole on the opposite edge of the Canvas, as shown above.



29 Slide the Pole Section all the way through the Canvas until it meets the metal end on the other Pole Section.

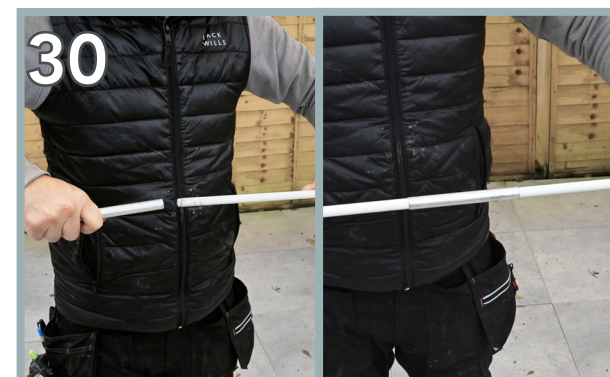

30 Connect the Pole Sections as shown above. This will to be done inside the Canvas. **Please be aware of pinch points when connecting the Pole Sections.**




31 Using the Long Rope on the front of the pergola, tie it to the Pole that is in front of it. Repeat this process for the Small Rope to the Pole cutout futher along.



32 The Large and Small Ropes tied to the Pole will look like the above. Once both ropes are tied to the pole, push the whole Canvas towards the back of the Pergola.




33 Ensure the Long & Small Ropes on the back of the pergola, are pulled over the top of the Canvas as shown above.

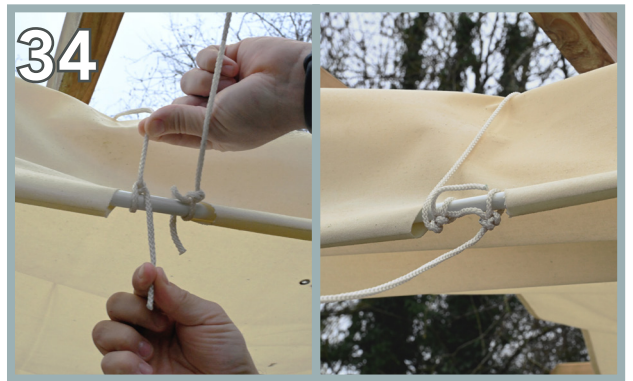


34 Tie the Long and Small Ropes from the back of the pergola to the pole on the front of the Canvas, as shown above.



35 Position the back of the Canvas onto the back rafter. Ensure the Canvas is taught along the edge.

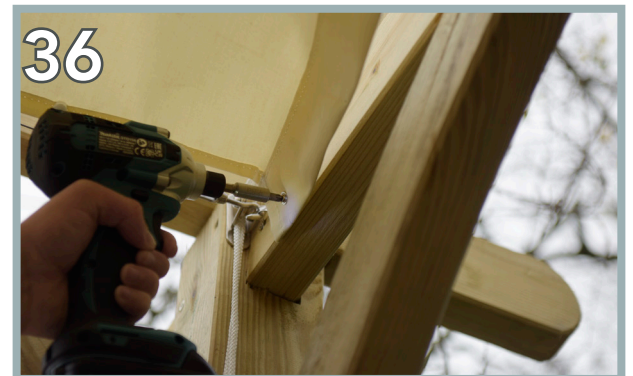

36 Screw through the eyelets into the back rafter, using 35mm screws to secure the back of the Canvas to the pergola.

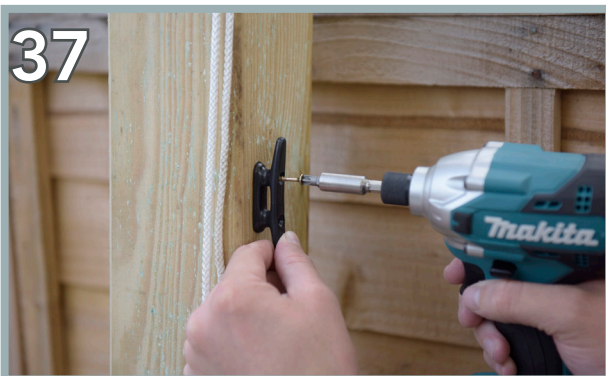

37 Position and secure 1 x Plastic Cleats to the posts under the Large Rollers. Ensure they are at a comfortable height for the ropes to be tied up for when the Canvas is both opened and closed.



38 To open the Canvas, you will need to pull the tied rope at the front of the pergola.



39 To close the Canvas, you will need to pull the tied rope at the back of the pergola. **Ensure the Canvas is closed or removed in adverse weather conditions.**



40 When opening or closing the pergola, make sure to tie up both tied Ropes to the Plastic Cleats, as this will ensure the Canvas is always taught. Ensure any trailing rope is secured to the fixings provided.

FINAL OUTCOME

