

URBAN GARDEN ARCH

- A** SIDE SECTIONS
- B** ROOF SECTION
- C** CORNER BRACKETS




Grange
DEFINING GARDENS

URBAN GARDEN ARCH

URBGA - 240cm [H] x 180cm [W] x 60cm [D]

Self-Assembly required Home Delivery available

PLAN

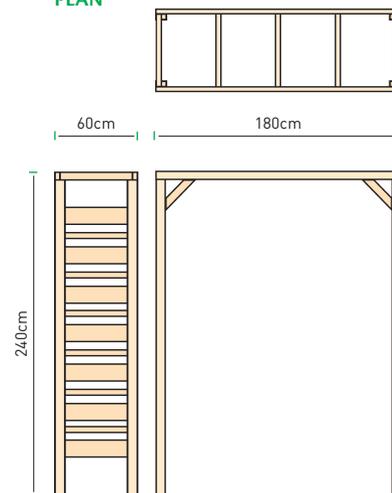

CODE URBGA

AFTERCARE

To ensure longevity of your structure it is recommended that it is treated with a wood preservative on a yearly basis.

©2015 Grange Fencing Ltd All rights reserved.
In line with the Company's policy of
continuous product development, the right
is reserved to change and improve product
design without prior notice.

All products and related emblems featured are
trademarks of Grange Fencing Ltd.

www.grangefen.co.uk



Thank you for choosing this garden product from Grange.
In order to gain the most benefit from it please read the following instructions carefully.

TOOLS REQUIRED (Not Supplied)

- POWER DRILL/SCREWDRIVER with posidrive No.2 bit
- 3mm DRILL FOR PILOT HOLES
- STEPLADDER
- WOODEN MALLET
- SPIRIT LEVEL

PARTS LIST


A	SIDE SECTIONS [240cm x 60cm]	2
B	ROOF SECTION [180cm x 60cm]	1
C	CORNER BRACKETS	4

HARDWARE PACK

[x]	SCREWS - 4 x 50	8
[y]	SCREWS - 4 x 60	8

OPTIONAL HARDWARE (Not Supplied)

- BOLT DOWN OR SPIKE POST ANCHORS
- CARLTON FP-ECO FIX CONCRETE MIX

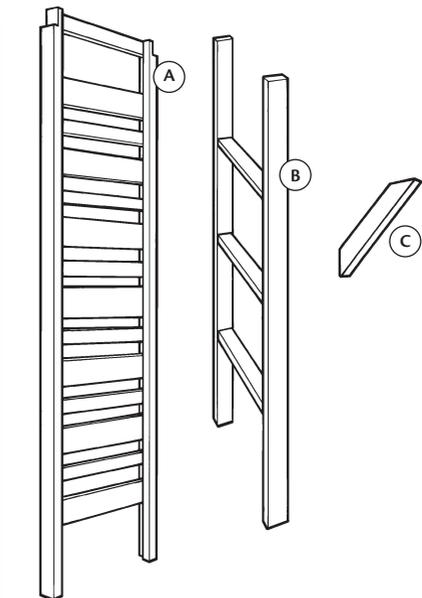

BEFORE YOU START


Please check the packs and make sure that you have all of the parts listed above. If not, contact your retailer who will be able to help you.

When you are ready to start make sure you have the right tools to hand, plenty of space and a clean dry area for assembly.

It is advisable for two people to carry out the work.

At each stage of construction ensure that the build is level and upright.

Drill pilot holes to aid assembly.

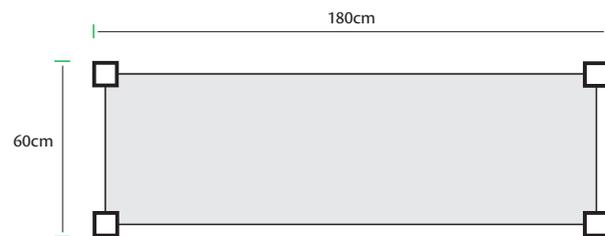


ARCH FOOTPRINT

Footprint of assembled arch is 180cm x 60cm

If bedding your Arch in the ground, either use Metpost Spikes or excavate a 30cm hole for each post. We recommend that you use Carlton FP-EcoFix, a fast set post fixing concrete to fix your posts. Easy to use, it sets in just 10 minutes.

If siting your Arch on a patio or decking area, using Metpost Bolt Down Anchors to secure the posts, then it might be advisable to shorten the legs of the Arch by up to 30cm.

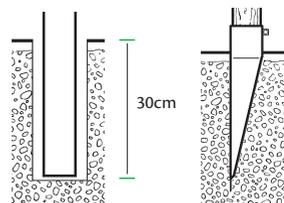

ASSEMBLY

STEP 1 - ASSEMBLING THE ARCH

Lay the two Side Sections [A] on the ground 180cms apart and connect them with the Roof Section [B] which slots neatly into position. Secure the roof in place using eight of the 5cm screws [x], two screws per post.

Lift the assembled structure upright.

STEP 2 - CORNER BRACKETS

Ensuring that the structure is upright and level, brace the Roof and Side Sections with the four Corner Brackets [C] and screw into position with the remaining eight screws [y], two screws per bracket.

For siting your arch see instructions on opposite page.

